


# MAINTENANCE/SERVICE

## 110 lb. Laundry Dryer

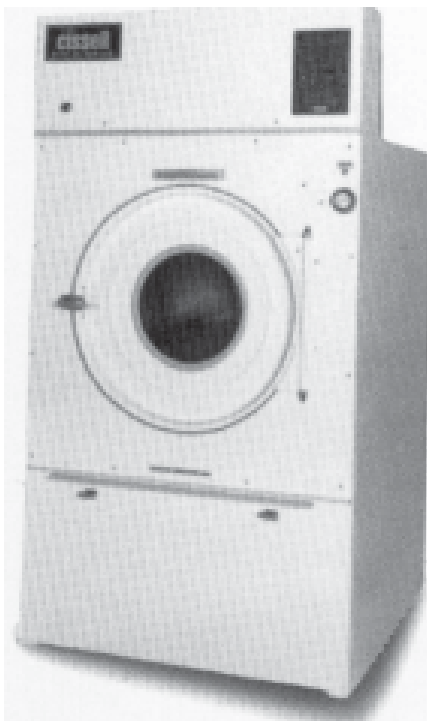

### MODELS

#### GAS

L44CD42G  
L44FD42G  
L44KD42G  
L44RD42G

#### STEAM

L44CD42S  
L44KD42S

#### ELECTRIC

L44CD42E  
L44KD42E

**CISSELL MANUFACTURING COMPANY**

**HEADQUARTERS**

831 SOUTH FIRST ST.

P.O. BOX 32270

LOUISVILLE, KY 40232-2270

PHONE: (502) 587-1292

SALES FAX: (502) 585-3625

SERVICE/PARTS FAX: (502) 681-1275

**THIS MANUAL MUST BE GIVEN TO THE EQUIPMENT OWNER.**

**MAN4M**

**9/98**

**1C**

**D0521**

## **IMPORTANT NOTICES—PLEASE READ**

For optimum efficiency and safety, we recommend that you read the Manual before operating the equipment. Store this manual in a file or binder and keep for future reference.



**WARNING:** For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury, or loss of life.

- Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

- WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliances.
- Do not touch any electrical switch; do not use any phone in your building.
- Clear the room, building, or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach the gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.



**WARNING:** In the event the user smells gas odor, instructions on what to do must be posted in a prominent location. This information can be obtained from the local gas supplier.



**WARNING:** Wear Safety Shoes to prevent injuries.



**WARNING:** Purchaser must post the following notice in a prominent location:



### **FOR YOUR SAFETY**

**Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**



**WARNING:** A clothes dryer produces combustible lint and should be exhausted outside the building. The dryer and the area around the dryer should be kept free of lint.



**WARNING:** Be safe, before servicing machine, the main power should be shut off.



**WARNING:** To avoid fire hazard, do not dry articles containing foam rubber or similar texture materials. Do not put into this dryer flammable items such as baby bed mattresses, throw rugs, undergarments (brassieres, etc.) and other items which use rubber as padding or backing. Rubber easily oxidizes causing excessive heat and possible fire. These items should be air dried.



**WARNING:** Synthetic solvent fumes from drycleaning machines create acids when drawn through the dryer. These fumes cause rusting of painted parts, pitting of bright or plated parts, and completely removes the zinc from galvanized parts, such as the tumbler basket. If drycleaning machines are in the same area as the tumbler, the tumbler's make-up air must come from a source free of solvent fumes.



**WARNING:** Do not operate without guards in place.



**WARNING:** Check the lint trap often and clean as needed but at least a minimum of once per day.



**WARNING:** Alterations to equipment may not be carried out without consulting with the factory and only by a qualified engineer or technician. Only **Manufacturer's** parts may be used.



**WARNING:** Remove clothes from dryer as soon as it stops. This keeps wrinkles from setting in and reduces the possibility of spontaneous combustion.



**WARNING:** Be Safe - shut main electrical power and gas supply off externally before attempting service.



**WARNING:** Never use drycleaning solvents, gasoline, kerosene, or other flammable liquids in the dryer. ***FIRE AND EXPLOSION WILL OCCUR. NEVER PUT FABRICS TREATED WITH THESE LIQUIDS INTO THE DRYER. NEVER USE THESE LIQUIDS NEAR THE DRYER..***



**WARNING:** Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.



**WARNING:** Never let children play near or operate the dryer. Serious injury could occur if a child should crawl inside and the dryer is turned on.



**WARNING:** Never tumble fiberglass materials in the dryer unless the labels say they are machine dryable. Glass fibers break and can remain in the dryer. These fibers cause skin irritation if they become mixed with other fabrics.



**WARNING:** Before operating gas ignition system - purge air from natural gas or propane gas lines per manufacturer's instructions.

## **CISSELL DRYER WARRANTY**

The Cissell Manufacturing Company (Cissell) warrants all new equipment (and the original parts thereof) to be free from defects in material or workmanship for a period of two (2) years from the date of sale thereof to an original purchaser for use, except as hereinafter provided. With respect to non-durable parts normally requiring replacement in less than two (2) years due to normal wear and tear, and with respect to all new repair or replacement parts for Cissell equipment for which the two (2) year warranty period has expired, or for all new repair or replacement parts for equipment other than Cissell equipment, the warranty period is limited to ninety (90) days from date of sale. The warranty period on each new replacement part furnished by Cissell in fulfillment of the warranty on new equipment or parts shall be for the unexpired portion of the original warranty period on the part replaced.

With respect to electric motors, coin meters and other accessories furnished with the new equipment, but not manufactured by Cissell, the warranty is limited to that provided by the respective manufacturer.

Cissell's total liability arising out of the manufacture and sale of new equipment and parts, whether under the warranty or caused by Cissell's negligence or otherwise, shall be limited to Cissell repairing or replacing, at its option, any defective equipment or part returned f.o.b. Cissell's factory, transportation prepaid, within the applicable warranty period and found by Cissell to have been defective, and in no event shall Cissell be liable for damages of any kind, whether for any injury to persons or property or for any special or consequential damages. The liability of Cissell does not include furnishing (or paying for) any labor such as that required to service, remove or install; to diagnose troubles; to adjust, remove or replace defective equipment or a part; nor does it include any responsibility for transportation expense which is involved therein.

The warranty of Cissell is contingent upon installation and use of its equipment under normal operating conditions. The warranty is void on equipment or parts; that have been subjected to misuse, accident, or negligent damage; operated under loads, pressures, speeds, electrical connections, plumbing, or conditions other than those specified by Cissell; operated or repaired with other than genuine Cissell replacement parts; damaged by fire, flood, vandalism, or such other causes beyond the control of Cissell; altered or repaired in any way that effects the reliability or detracts from its performance, or; which have had the identification plate, or serial number, altered, defaced, or removed.

No defective equipment or part may be returned to Cissell for repair or replacement without prior written authorization from Cissell. Charges for unauthorized repairs will not be accepted or paid by Cissell.

CISSELL MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY, STATUTORY OR OTHERWISE, CONCERNING THE EQUIPMENT OR PARTS INCLUDING, WITHOUT LIMITATION, A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, OR A WARRANTY OF MERCHANTABILITY. THE WARRANTIES GIVEN ABOVE ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. CISSELL NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT, ANY OTHER WARRANTY OR LIABILITY IN CONNECTION WITH THE MANUFACTURE, USE OR SALE OF ITS EQUIPMENT OR PARTS.

For warranty service, contact the Distributor from whom the Cissell equipment or part was purchased. If the Distributor cannot be reached, contact Cissell.

### **IDENTIFICATION NAMEPLATE**









The Identification Nameplate is located on the rear wall of the dryer. It contains the dryer serial number, product number, model number, electrical specifications and other important data that may be needed when servicing and ordering parts, wiring diagrams, etc. Do not remove this nameplate.

**TABLE OF CONTENTS**  
**110 LB. LAUNDRY DRYER**  
**MAINTENANCE/SERVICE MANUAL**





	<b>PAGE</b>
Model Numbers & Company Address .....	1M
Important Notices .....	2M-3M
Dryer Warranty .....	4M
Table of Contents .....	5M
Warnings, Cautionary Notes and Symbols .....	6M-7M
Direct Spark Ignition System .....	8M-9M
General Maintenance .....	10M-11M
Burner Air Inlet Shutters Adjustment .....	12M-13M
Basket Alignment .....	14M-15M
Shimming the Basket and Spider Assembly .....	16M
Air Switch Adjustment .....	17M
Dryers with Reversing Control Timer .....	18M-19M
Large Gear Reducer Maintenance .....	20M
Front Panel and Door Assembly .....	21M
Dryer - Front View .....	22M-23M
Double Motor Model .....	24M-25M
Duct Work Assembly .....	26M
Basket and Sensor Assembly .....	27M
Temperature Assembly .....	28M
Fan Motor Mount Assembly .....	29M
Air Switch and Thermostat Assembly .....	30M
Large Gear Reducer with Bronze Teeth .....	31M
Non-Reversing Control Panel Assembly .....	32M
Permanent Press Control Panel Assembly .....	33M
Control Panel and Access Door Assembly .....	34M
Reversing Control Box Assembly .....	35M
Gas Heating Unit .....	36M-39M
Steam Bonnet .....	40M-41M
Electric Heating Unit .....	42M-43M
Ordering Overload Heaters for Overload Relays .....	44M

## SYMBOLS

The following symbols are used in this manual and/or on the machine. The numbers between () refer to the numbers on the machine surveys.

Symbol	Description	Part/Measurement
	<b>NOTE!</b>	
	<b>Hot! Do Not Touch</b> <b>Heiß! Nicht Berühren</b> <b>Haute temperature! Ne pas</b> <b>toucher</b> <b>Caliente! no tocar</b>	
	<b>dangerous voltage</b> <b>tension dangereuse</b> <b>Gefährliche elektrische</b> <b>Spannung</b> <b>tension peligrosa</b>	
	<b>on</b> <b>marche</b> <b>Ein</b> <b>conectado</b>	
	<b>off</b> <b>arrêt</b> <b>Aus</b> <b>desconectado</b>	
	<b>start</b> <b>demarrage</b> <b>Start</b> <b>arranque de un movimiento</b>	
	<b>emission of heat in general</b> <b>émission de chaleur en</b> <b>general</b> <b>Warmeabgabe allgemein</b> <b>emisión de calor</b>	
	<b>cooling</b> <b>refroidissement</b> <b>Kühlen</b> <b>enfriamiento</b>	

## SYMBOLS

Symbol	Description	Part/Measurement
	<b>rotation in two directions</b> <b>rotation dans les deux sens</b> <b>Drehbewegung in zwei Richtungen</b> <b>movimiento rotativo en los dos sentidos</b>	
	<b>direction of rotation</b> <b>sens de mouvement continu de rotation</b> <b>Drehbewegung in Pfeilrichtung</b> <b>movimiento giratorio o rotatorio en el sentido de la flecha</b>	
	<b>End of Cycle</b>	
	<b>caution</b> <b>attention</b> <b>Achtung</b> <b>atencion; precaucion</b>	

## Operation of the Norton Ignition System


### OPERATION OF THE NORTON IGNITION SYSTEM

Power to the ignition system is 120 volts. It is rated voltage or on higher voltage machines the 120 volts is from a transformer. The ignition system is powered through a timer or coin meter and a thermostat which calls for heat.

The two gas valves are plumbed into a single gas line and both must open before the gas can flow into the burners.

The following diagrams are line to line schematics of the ignition system. The numbers 4, 7, 3, 9, and letters A and B are terminals on the ignition relay.

FIGURE 1

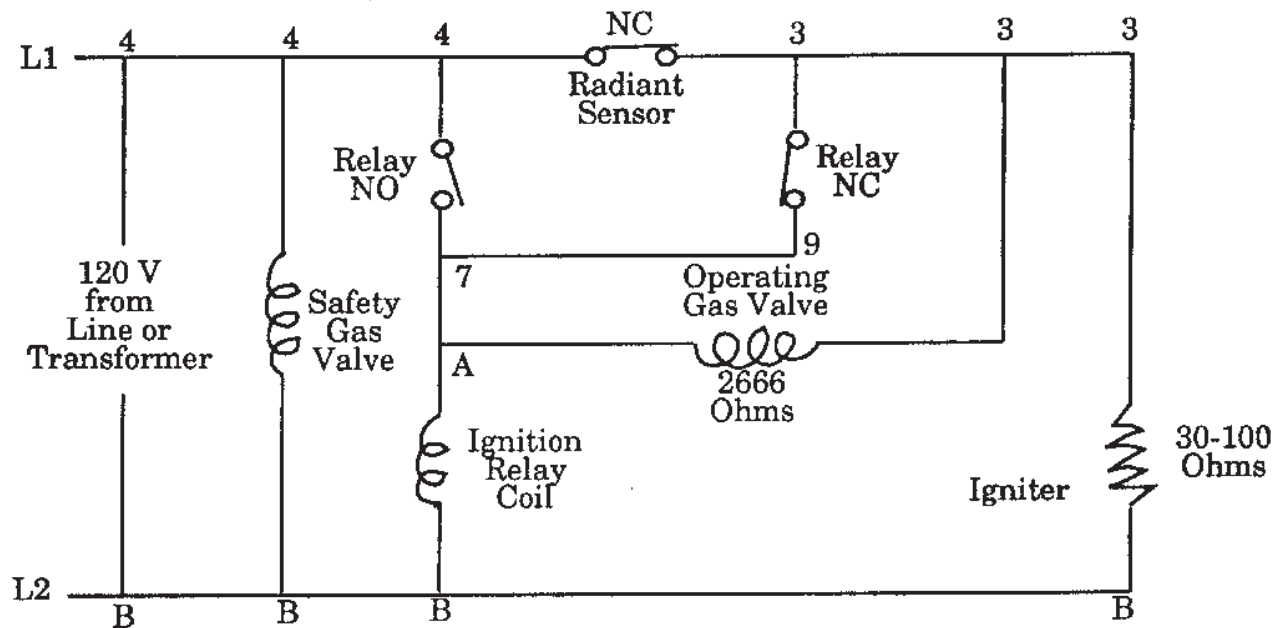

### NORTON IGNITION SYSTEM


Figure 1 (Start of Cycle)

#### Step #1

- The Safety Gas Valve is connected across the lines and opens immediately as soon as a need for heat is indicated by the thermostat.
- The Ignition Relay Coil is energized through the normally closed (NC) contacts of the Radiant Sensor and the NC contacts of the relay. NOTE: Figure 1 shows the electrical circuit of the relay just before it is energized. Figure 2 shows the circuit a *moment later*.
- The igniter is energized through the NC contacts of the Radiant Sensor.
- The Operating Gas Valve is connected such that the same 120 volts is applied to both sides of the Gas Valve and the valve stays closed.



FIGURE 2

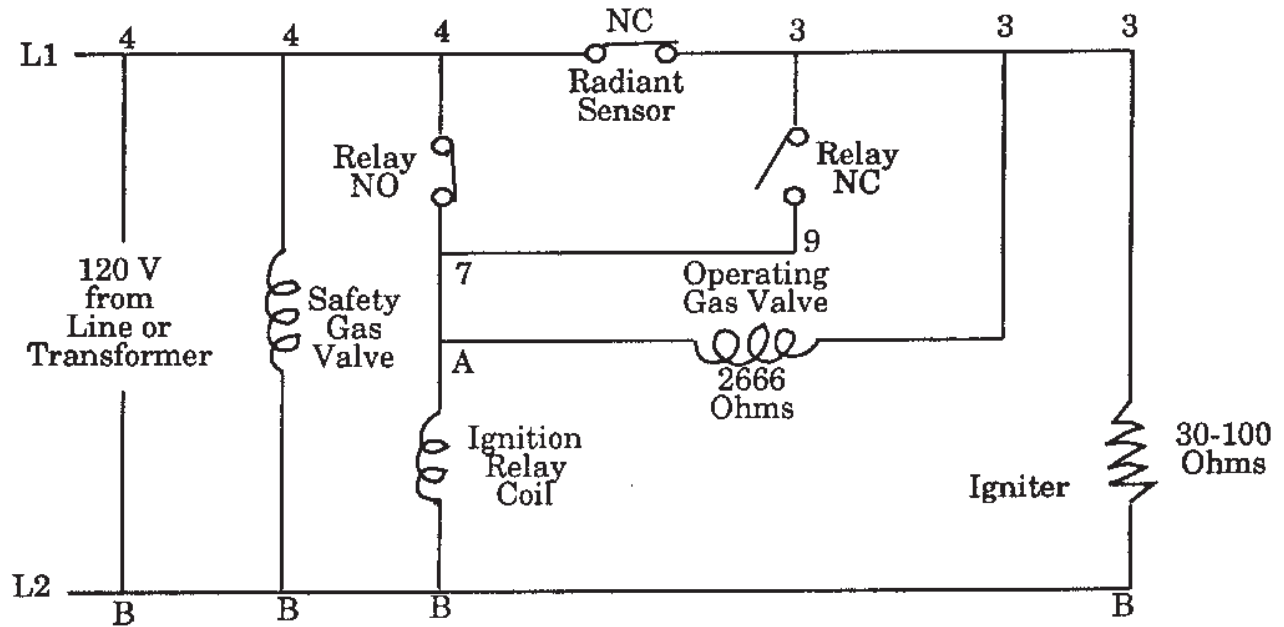


### NORTON IGNITION SYSTEM

Figure 2 (Start of Cycle)

#### Step #2

- The Ignition Relay closes now and the Relay Coil stays energized by being powered through the normally open (NO) contacts of the Ignition Relay which *close* before the NC contacts *open*.
- The operating gas valve still has the 120 volts applied to both sides of the gas valve and the valve stays *closed*.

FIGURE 3

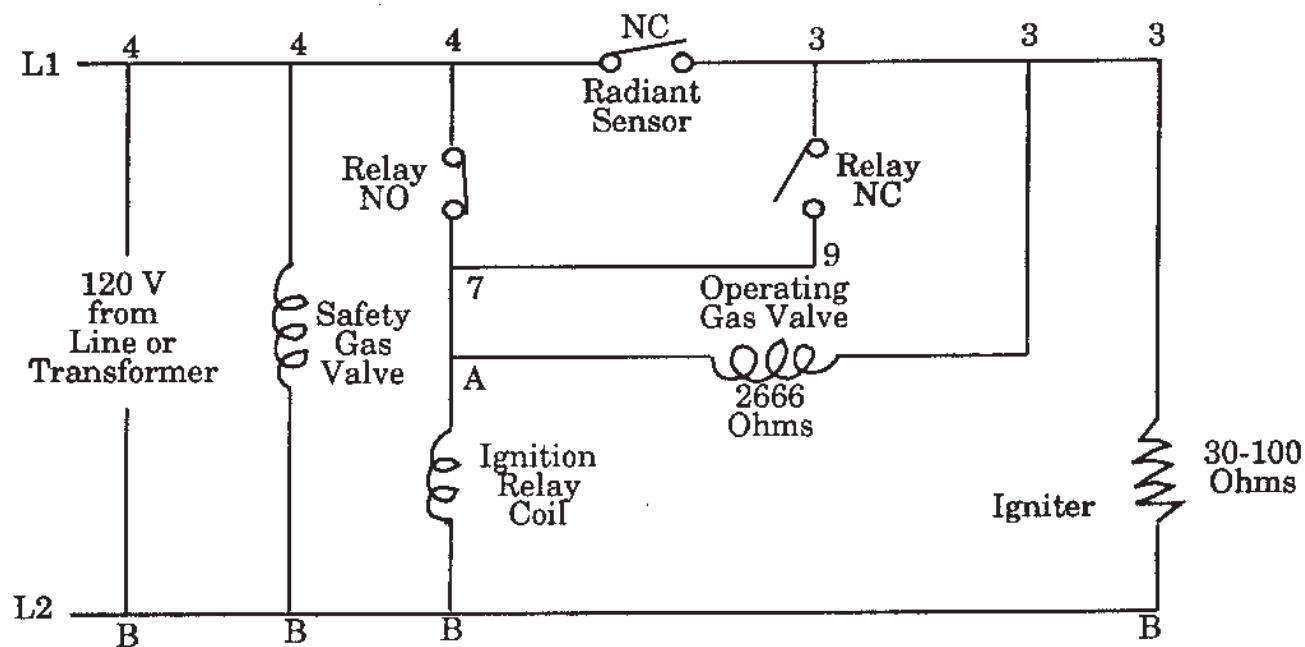

### NORTON IGNITION SYSTEM

Figure 3 (About 20 Seconds Later)

#### Step #3

- The Igniter glows *red hot*, which causes the Radiant Sensor to *open* its NC Contacts, which de-energizes the Igniter.
- As the Radiant Sensor NC Contacts *open*, the 120 volt to one side of the operating Gas Valve Coil is removed and an electrical circuit is formed through the NO Contacts of the Ignition Relay, through the Gas Valve and through the Igniter, and the Gas Valve *opens*. The relatively low resistance of the Igniter allows nearby **full** voltage to be applied to the operating Gas Valve and nearby **zero** voltage to the Igniter and the Igniter is de-energized for all practical purposes.
- As the raw gas flows against the *red hot* Igniter, ignition takes place. The radiant gas flame replaces the radiant glowing of the Igniter and the Radiant Sensor NC Contacts remain *open*.

## Operation of the Norton Ignition System

### IGNITION OPERATION

The flame will burn until the thermostat opens the circuit or until the time on the timer or coin meter expires.

The following summarizes the ignition operation:

- Start machine drying cycle.
- Carbide igniter will get *red hot*.
- Then, gas valve will open.
- The gas burners are ignited by the carbide igniter.
- Igniter will shut off and burners will remain on during drying cycle.
- Opening tumbler door will cause gas to extinguish. Shut door and gas will not light until flame sensor cools and normal ignition cycle begins.

### NOTE

#### NOTE

Push “start” switch *after* door is shut.

### SAFETY FEATURES

- If gas does not light, then the sensor will cool down and restart the ignition cycle.

### SAFETY FEATURES

#### Power Interruptions During Burning of the Gas


Both gas valves are de-energized and the gas is shut off. The Ignition Relay is also de-energized and returns the contacts to the NO and NC positions. Even with resumption of power, the operating gas valve stays closed until the NC contacts of the Radiant Sensor close (about 30 seconds from time of power interruption). A normal ignition cycle begins at this time.

#### Burner Doesn’t Light Because of Low Voltage or Low Gas Pressure

The operating gas valve will be energized for about 30 seconds and then the NC contacts of the Radiant Sensor will be closed. 120 volts is applied to both sides of the operating gas valve and it closes to shut off the gas. A normal ignition cycle begins at this time.


## Operation of the Norton Ignition System

120 Volts; 50/60 HZ; 1 Phase - TWL1512

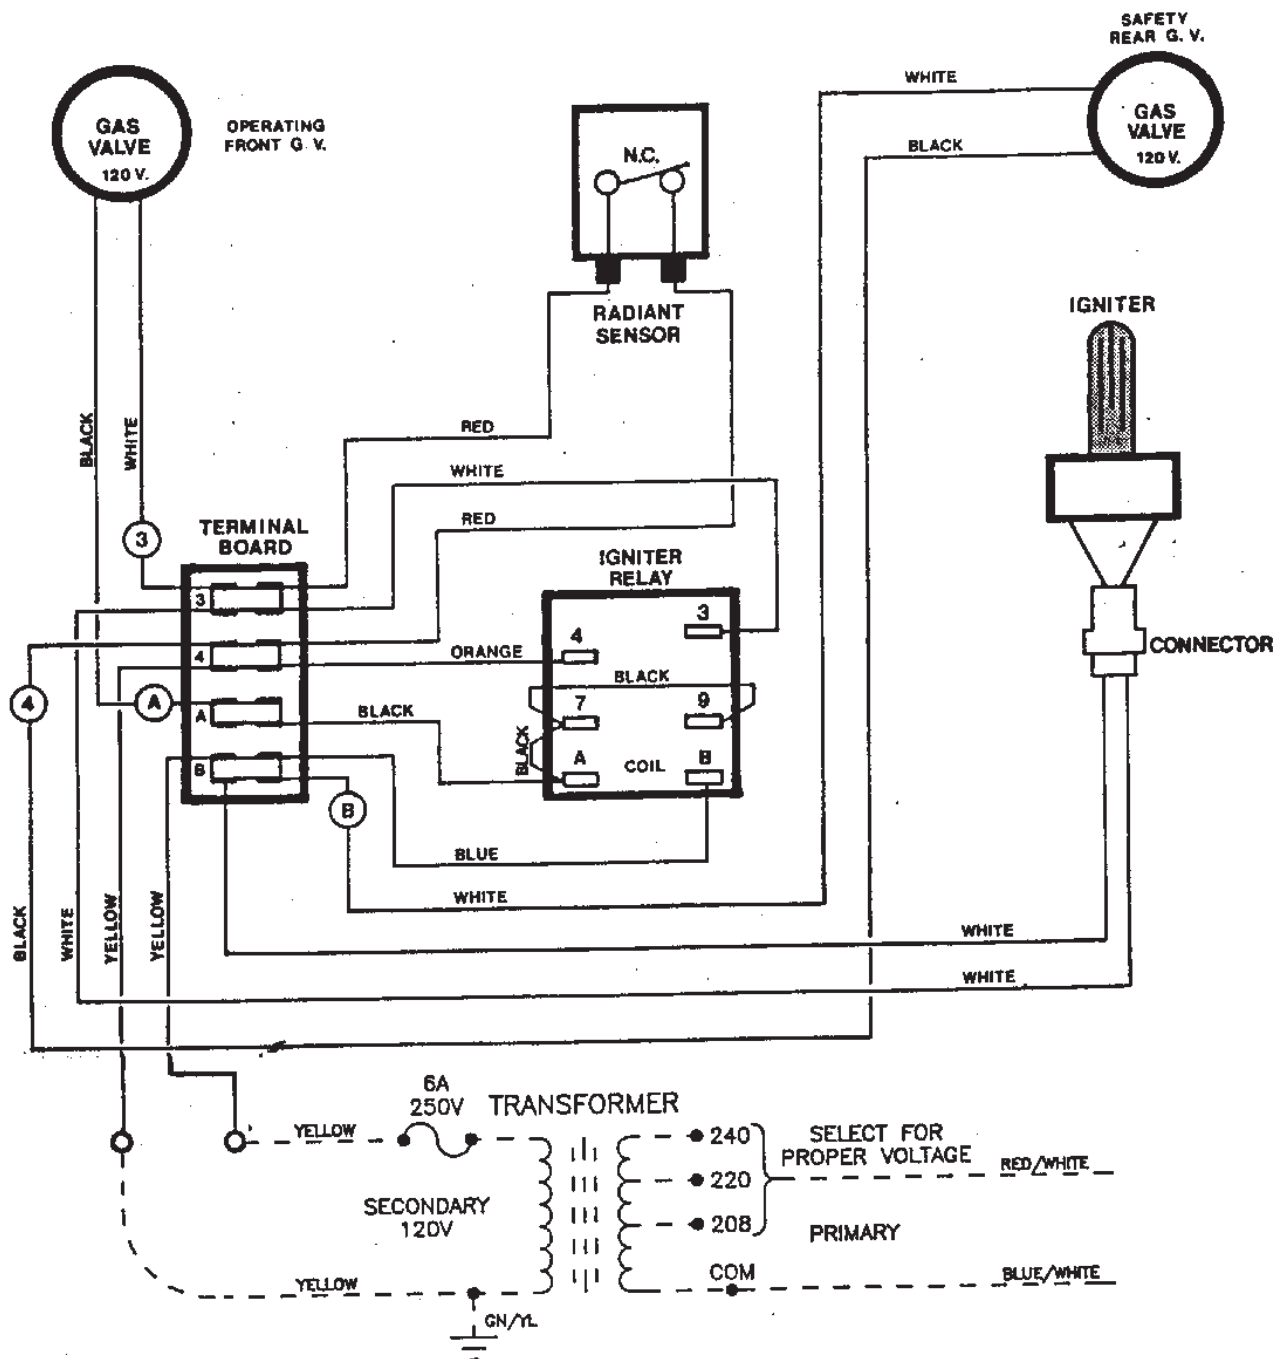

## Operation of the Norton Ignition System

120 Volts; 50/60 HZ; 1 Phase - Gas Dryers - TWL1587  
Automatic Computerized Drying Control

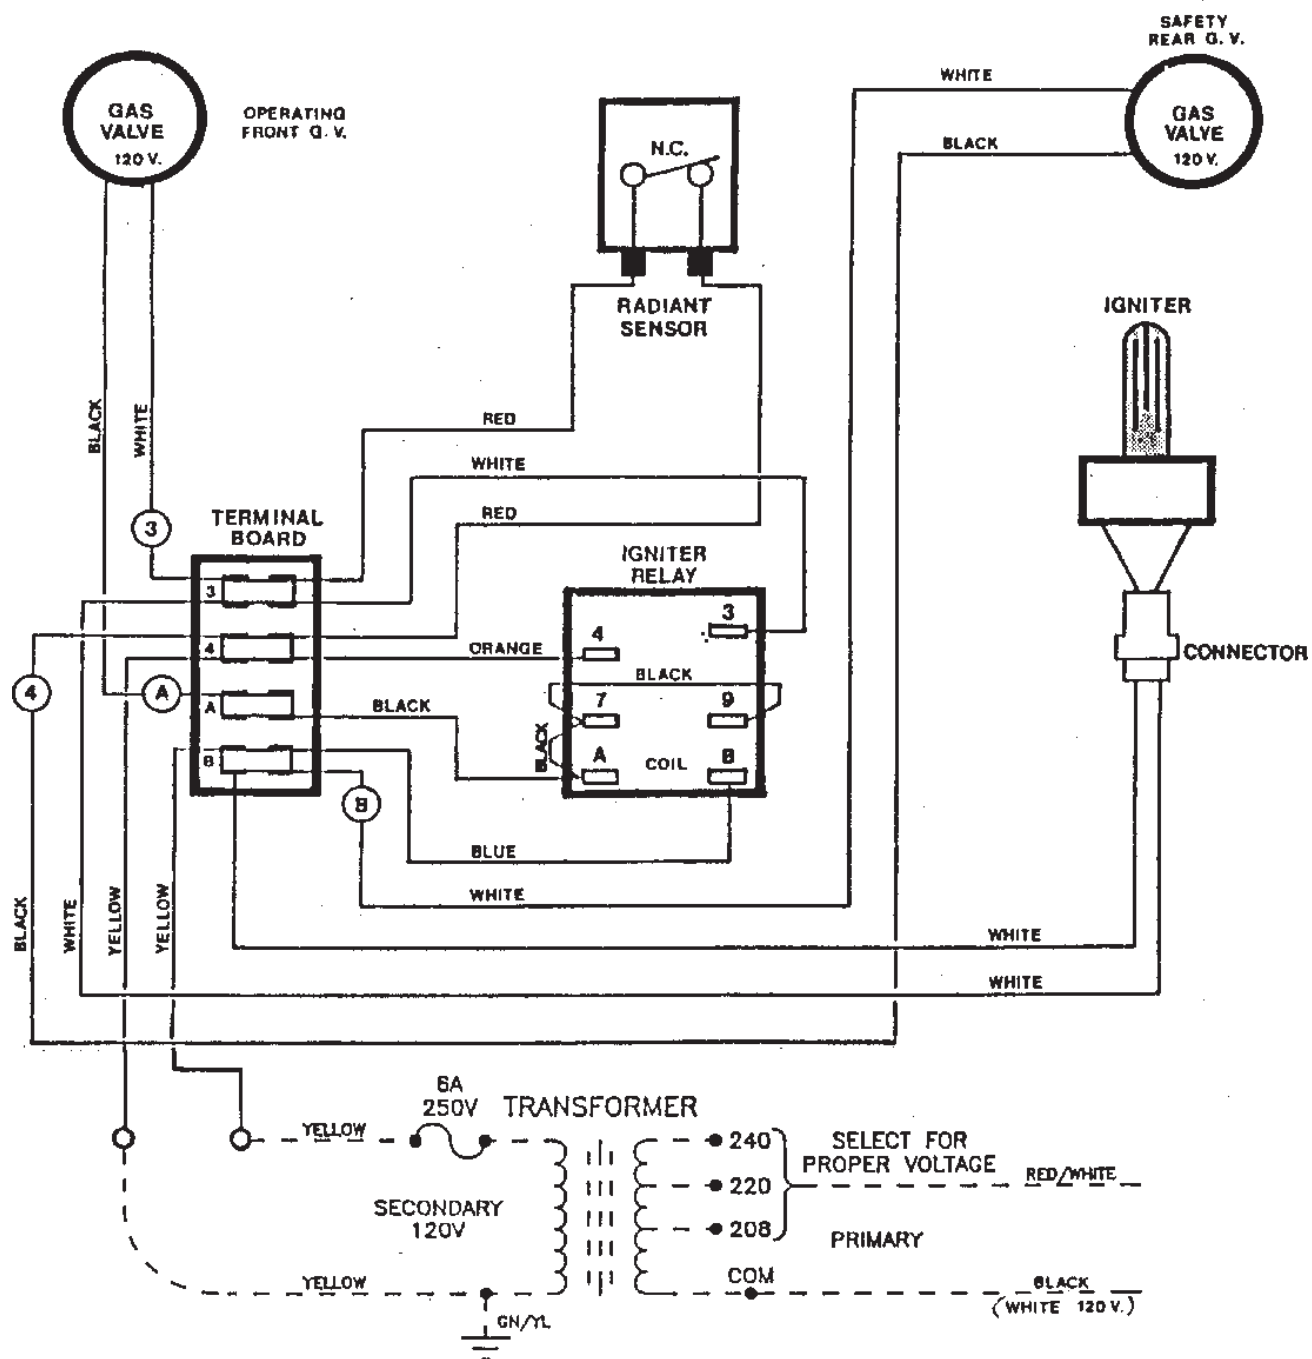

## Operation of the Norton Ignition System

### TESTPROCEDURE

### TESTPROCEDURE

1. If igniter does not glow *red*, disconnect and test with separate 120V. Replace if it does not glow *red*. If it is damaged or cracked, replace.
2. Check wiring of ignition system parts per wiring diagram.
3. Gas valves must be open (click) when dryer is energized. Burners will ignite after 12 to 25 seconds.
4. After flame is burning, Igniter will go out. If both gas valves do not open, then replace.
5. If Igniter does not go out, then replace Radiant Sensor. If the Radiant Sensor glass is broken, replace it.
6. Open and close dryer loading door after gas has started burning. When door is closed, gas should not flow until radiant sensor has cooled and Igniter recycles.

### INSTRUCTIONS FOR DIRECT IGNITION SYSTEM OPERATION

### INSTRUCTIONS FOR DIRECT IGNITION SYSTEM OPERATION

1. Open manual gas valve; handle should be parallel with gas line.
2. Start machine drying cycle. The igniter will glow *red hot*; the gas valves will open and the burners will ignite.
3. The igniter will shut off and the burners will continue burning during heat cycle.
4. Opening the tumbler loading door will cause the gas to extinguish. Shut the door and the gas will not flow until the flame sensor has cooled. Push the “**start**” button to begin cycle after door is closed. If ignition fails, wait for five minutes to restart.
5. To shut off dryer, close the manual gas valve. The handle should be at a right angle to the gas line. Turn off the main electrical supply switch.

### CAUTION

#### CAUTION

Check igniters with 120V before installing on dryer.

## *Troubleshooting*

### **TROUBLE ANALYSIS FOR ENERGY SAVER DRYERS AND THE NORTON IGNITION SYSTEM**

**Trouble analysis for Energy Saver Dryers and the Norton Ignition System.**

#### **CAUTION**

**Problems with the Norton Ignition System can also be the result of the following:**

#### **EXHAUST PIPE SIZE**

1. Exhaust air flow restriction. Exhaust pipe size **must be larger** than the **exhaust opening**. Refer to chart in manual.

#### **DRYER INLET AIR**

2. **Dryer inlet air** is a **MUST** for each unit. It must be 4 to 6 times the combined areas of the dryer exhaust outlet. Refer to chart in manual.

#### **DRYER PANELS**

3. All dryer **panels must be in place** and on machine for proper operation.

#### **GAS PRESSURE**

4. Gas pressure must be 7-9 1/2 inches WC for natural gas and 11 inches WC for propane or butane (bottled) gases.

5. Refer to chart for correct gas pipe sizes and lengths. The 3/4 inch gas pipe must be the minimum gas supply pipe for the dryer and over 50 ft., 1 inch pipe size.

#### **MAIN BURNER ORIFICE SIZE**

6. Main burner orifices **must be** correct size. They are calculated with the following information:

- a. Your locality heating value of gas, BTU/cu. ft.
- b. Local specific gravity of gas.
- c. Gas manifold pressure inches of WC.
  - 1) 3.5 inches WC pressure for natural gas.
  - 2) 11 inches WC pressure for propane or butane gases.
- d. Gas input rate per each burner orifice.

## *Troubleshooting*

### **TROUBLE ANALYSIS FOR ENERGY SAVER DRYERS AND THE NORTON IGNITION SYSTEM (continued)**

7. Voltage **must be** identical to what is on the Electrical Rating Plate. Prevent low voltage; it causes longer drying operation.
8. Back Draft Damper **must** swing **full open** to prevent air flow restrictions. (Check for full open operation every 6 months.) Non-operative or erratic operation of exhaust dampers will cause air flow switches to shut off gas and will result in longer drying time.

#### **NOTE**

**The above should be checked and corrected before attempting to troubleshoot the Norton Ignition System.**

#### **NOTE**



MAINTENANCE

MAINTENANCE

1. **CLEAN LINT TRAP DAILY.** Remove lint before starting day's operation. A clean lint trap will increase the efficiency of the dryer, as the moisture-laden air will be exhausted more quickly.
2. **CLEAN BASKET AND SWEEP SHEETS.** Clean periodically and/or as often as required. The basket and sweep sheets are easily accessible by removing the front panel of the dryer.
3. **GEAR REDUCER.** Maintain the correct oil level. See separate page on Gear Reducer Operation and Maintenance, for detailed information.
4. **PULLEYS AND BELTS.** Keep belts clean. Oil and dirt will shorten the useful life of the belt. Never allow a belt to run against the belt guard. Check periodically for alignment. Pulley shafts must be parallel and the grooves must be aligned. Check and re-tighten pulley set screws periodically. Check belt tension periodically. Lower motor to increase tension by adjusting the nuts fastening the motor plate to the rod connected to the Gear Reducer.
5. **ELECTRIC MOTORS.** Keep motors clean and dry. Motors having ball bearings are packed with sufficient grease for approximately five years of normal operation. After five years, the bearings and housing should be cleaned thoroughly. Repack each bearing and the cavity in back of the bearing on-third full with Chevron Grease No. SR1-2.

Motors having wool packed sleeve bearings are oiled at the factory for one year of normal operation. After one year, add annually one-half teaspoon of electric motor oil or S.A.E.#10 to each bearing. For 24 hour per day operation, add one teaspoon of oil annually.

If motors overheat, check voltage and wiring. Low voltage, inadequate wiring, and loose connections are the main cause of motor failure.

## ***Maintenance—General***

### **MAINTENANCE (Cont'd)**

6. **STEAM HEATING UNITS.** Keep steam coils clean. Check periodically and clean often, as required. Remove lint and dirt build-up from fins. Dirty fins decrease the efficiency of steam heated units.
7. **GAS BURNERS.** Keep burners clean. Check periodically and clean often.
8. **EXHAUST SYSTEM.** Periodically check and clean.
9. **CLEAN OUT PANEL.** (Energy Saver Gas Models) Remove this panel, located on the heating unit, and clean the inside area of lint and dirt on a regular basis.
10. **DRYER AREA.** Keep dryer area clean and free from combustible materials, gasoline and other flammable vapors and liquids.
11. **MAKE-UP AIR.** Do not obstruct the flow of combustion (make-up) air and ventilating air.
12. **GAS PRESSURE.** Periodically check gas pressure.
13. **DRYER VOLTAGE.** Periodically check dryer voltage per dryer Rating Plate.

*Burner Air Inlet Shutters Adjustment (with Illustration)*


**BURNER AIR INLET  
SHUTTERS ADJUSTMENT**

Type of Gas	Burner Air Inlet Shutters Adjustment
Natural Gas	1/2 Open
Liquid Petroleum	1/4 Open
Manufactured Gas	1/16 Open

**Air Shutters Adjustment**

Proper Method: Close air shutters to yellow tip, then open air shutters to blue flame tip. Orange tips are impurities in the air such as lint, dust, etc.

Burners Air Inlet Shutters are correctly adjusted when flame is primarily blue.

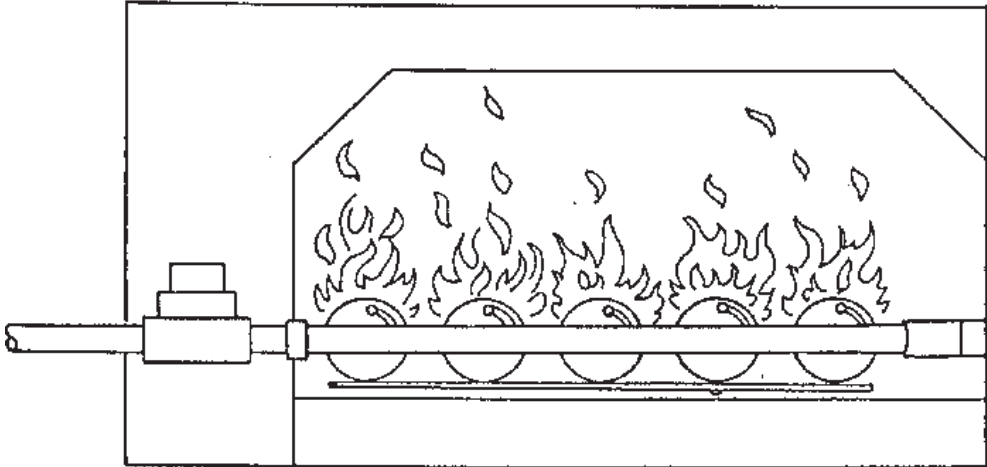


**CORRECT**

### ***Burner Air Inlet Shutters Adjustment (with Illustration)***

#### **NEED TO PROVIDE CORRECT AIRFLOW THROUGH THE DRYER**




#### **Need to Provide Correct Airflow Through the Dryer**

This flame pattern indicates the Burner Air Inlet Shutters are correctly adjusted, but air through the dryer is insufficient. This condition indicates excessive lint in the lint compartment, lack of make-up air in the room, restricted exhaust duct, or a vacuum in the room caused by an exhaust fan.

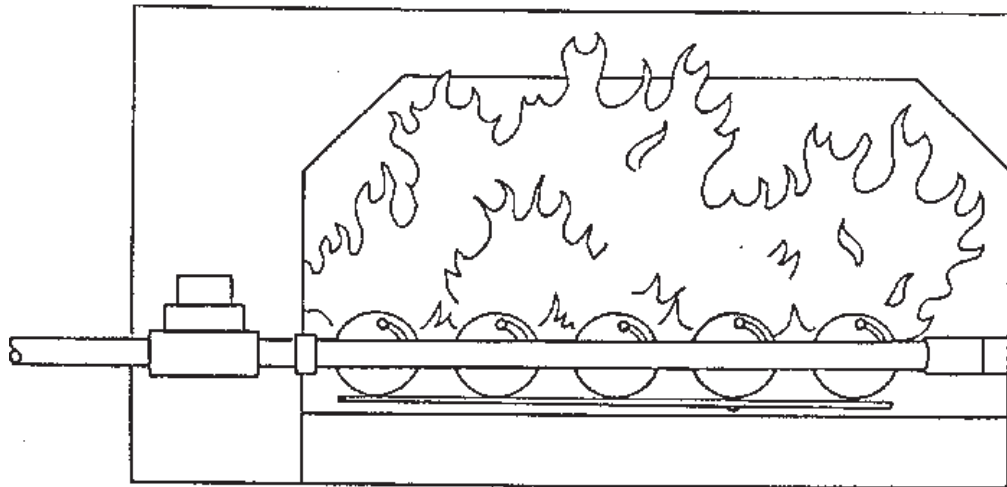

**WRONG**

*Basket Alignment for 110 lb. Dryers (Illustrations)*

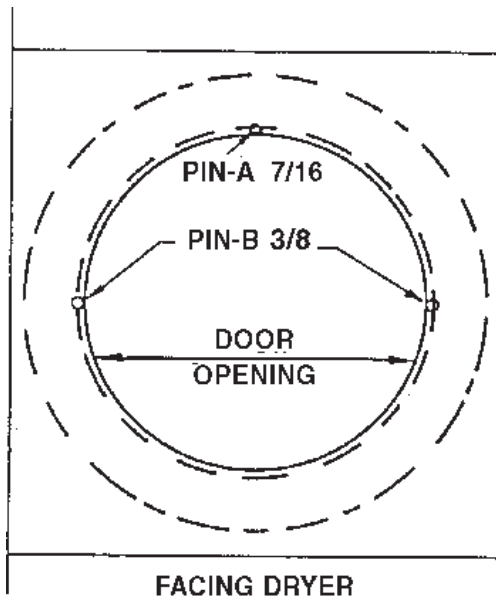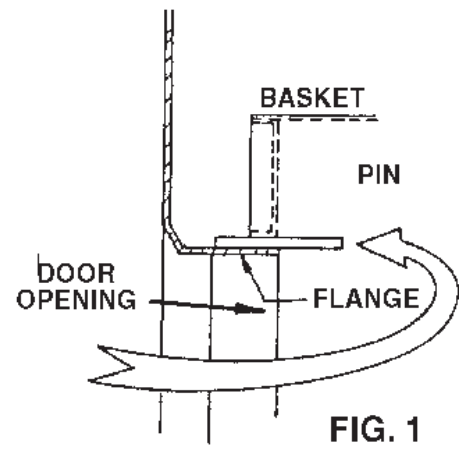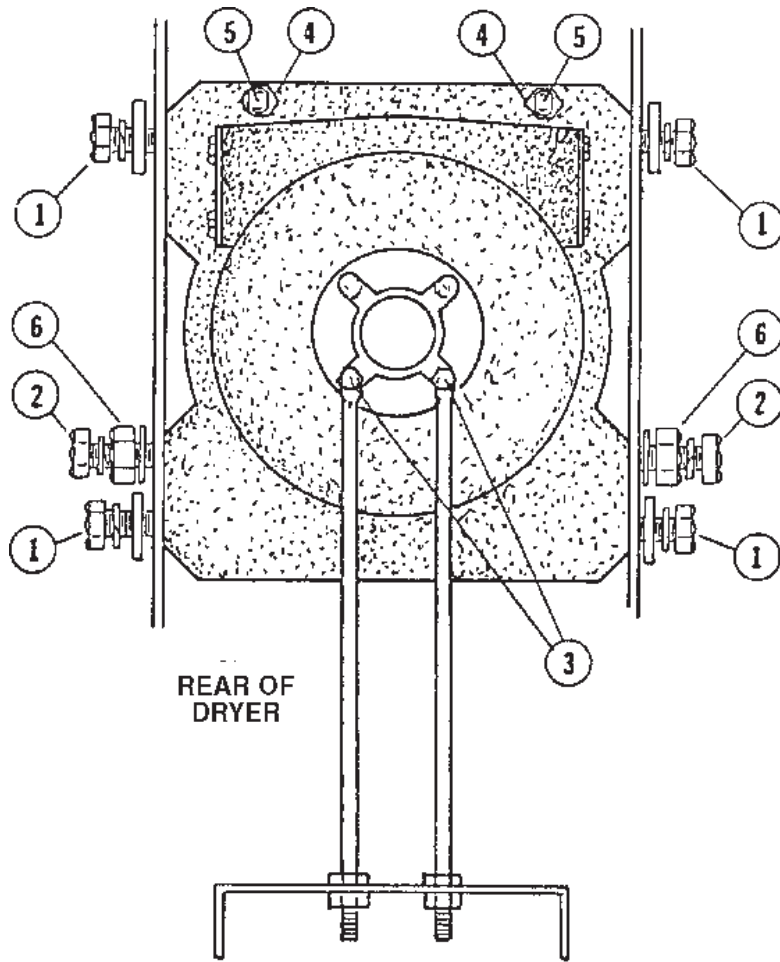

**FIG. 2**

### *Basket Alignment for 110 lb. Dryers*

#### **INSTRUCTIONS FOR ALIGNING BASKETS ON CISSELL 110 LB. DRYERS**


#### **INSTRUCTIONS**

1. Loosen bolts number one (1) through five (5).
2. Place pin "A" in position shown in figures 1 and 2.
3. Check pins "B" at position shown in figures 1 and 2 for equal clearance.
4. If pin "B" clearance is unequal, adjust at nut #6.
5. When clearance at pin "B" is correct, tighten bolts #1 in the following order, as viewed from rear of dryer, top right, bottom left, top left and bottom right.
6. Tighten bolts #5 until flush against back of dryer. Tighten lock nut #4 to secure bolt #5 in position.
7. Tighten bolts #2 and #3.
8. Remove pin "A" and check for proper clearance at points "A" and "B". If clearance is incorrect, repeat the above steps.

#### **NOTE**

**Use short sections of round steel rod for pins or drill bits may be used in place of round rod.**




## Shimming the Basket and Spider Assembly

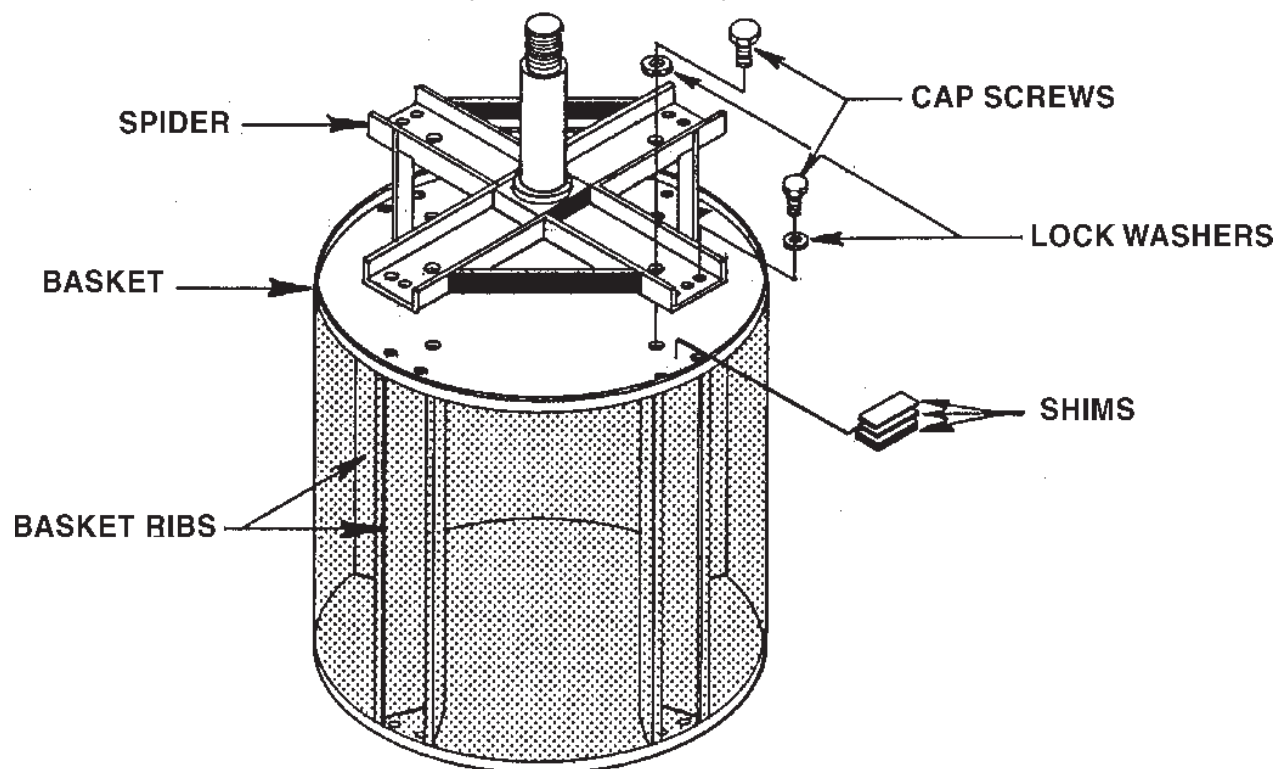

### INSTRUCTIONS FOR SHIMMING THE BASKET AND SPIDER ASSEMBLY

This procedure is normally necessary when replacing either the basket or the spider assembly on any Cissell dryer. The alignment of these two parts is crucial in assuring a true running basket.

- A. Align the basket as per instructions on the previous page.
- B. Rotate the basket to determine where the most out-of-round point is (where the basket scrapes or comes closest to scraping the sweep sheet).
- C. Mark this position and the nearest rib to this position. If it is between two ribs, both ribs may need to be shimmed.
- D. Remove the basket from the dryer (do not loosen the alignment bolts).
- E. With the basket on the floor (spider up), loosen the cap screws and tie rod nuts enough to insert one or two shims between the spider leg and the basket at the marked position. With shims in place, tighten the screws and nuts.
- F. Install spider and basket assembly and check again.
- G. If basket is still out-of-round, start at *Step B* and repeat procedure.
- H. When shimming is completed, re-align basket.

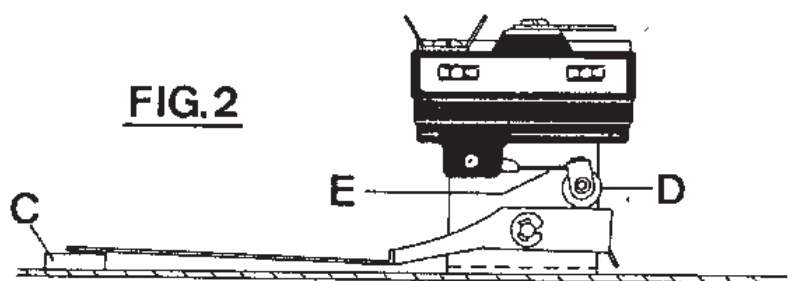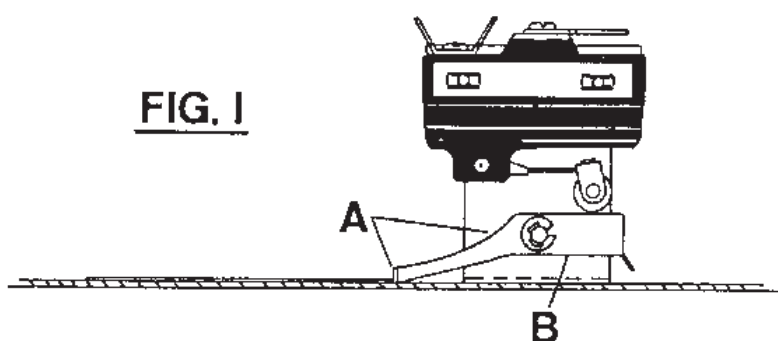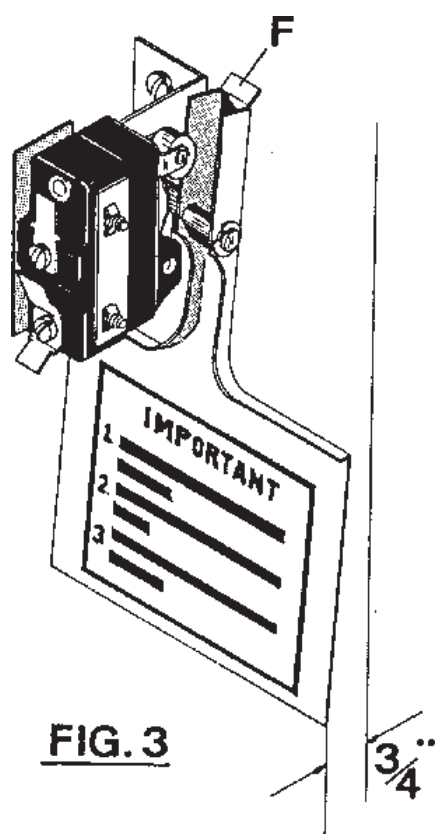

## AIRSWITCH ADJUSTMENT

1. Shut off current; disconnect leads and remove air switch.
2. Lay air switch assembly on flat surface. Adjust air blade at "A" (figure 1) so that air blade lays flat and surface "B" is parallel to the flat surface.
3. Place 3/8" x 5/8" spacer bar or equivalent "C" (figure 2) under air blade in position shown; hold switch mounting bracket firmly and adjust switch actuator "D" with needle nose pliers at "E" by twisting actuator right or left, whichever is needed, so that switch closes when end of air blade engages bar "C".
4. Maximum opening of air switch must be no greater than 3/4" (figure 3). Bend tab "F" in or out to maintain this dimension.
5. Re-install air switch assembly on rear of dryer.
6. Re-check operation of air blade. Switch must close before air blade engages face of opening and re-open before stop "F" engages.



**INSTRUCTIONS FOR  
DRYERS WITH  
REVERSING CONTROL  
TIMER**

**Instructions**

In operation, coasting of basket increases, making it necessary to readjust reversing timer.

**CAUTION**

**Failure to do this will cause the thermal overload units for the basket to cut-out unnecessarily and probably damage the gear reducer.**

**Adjustment of Reversing Timer Dwell Time**

**CAUTION**

**Dryer power supply must be shut off before adjusting timer.**

The dwell time is the time from when the motor turns “off”, to when it turns “on” again in the opposite direction.

Turning the dwell adjustment knob counter-clockwise increases the dwell time and turning it clockwise decreases the dwell time.


Recommended dwell time for the basket to stop completely is 5 to 7 seconds. Minimum basket stopping time is 4 seconds.

**NOTE**

**Select non-reversing or reversing before starting dryer.**

**NOTE**

**Fan rotates counter-clockwise as viewed from back end of motor. See arrow on motor support. to change rotation, reverse power leads L1 and L2.**

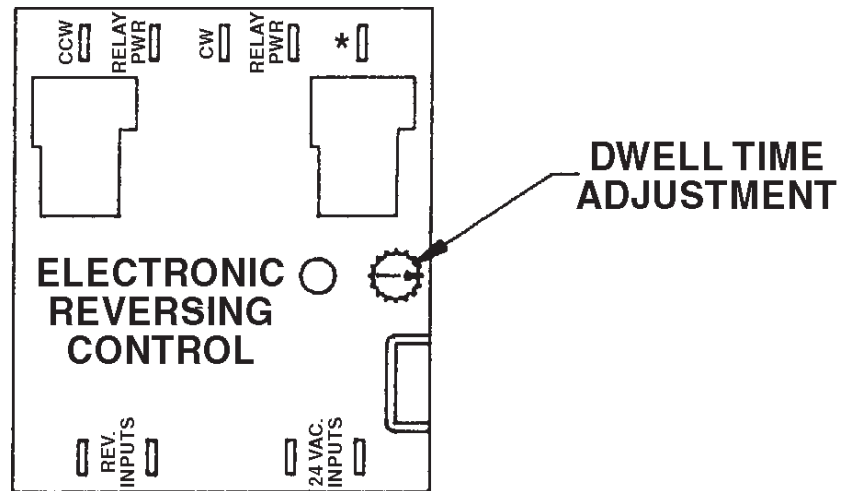

**INSTRUCTIONS FOR  
DRYERS WITHOUT  
REVERSING CONTROL  
FAN AND BASKET  
ROTATION**

**Instructions**

**NOTE**

**Fan rotates counter-clockwise as viewed from back end of motor. See arrow on motor support.**

Basket rotates counter-clockwise as viewed from back end of motor.  
See arrow on motor support.

Basket rotates counter-clockwise as viewed from front of tumbler.

To change rotation of both fan and basket, reverse power leads L1 and L2.

To change rotation of fan only, reverse motor leads F1 and F2.

To change rotation of basket only, reverse motor leads B1 and B2.

*Large Gear Reducer Maintenance*

**LARGE GEAR REDUCER  
MAINTENANCE**


**LARGE GEAR REDUCER MAINTENANCE**

**Before placing the dryer in operation,** check the oil level. If the oil level is correct, it can be seen through the sight glass on the right hand side of the gear reducer (facing rear).

If oil must be added, remove the pop-off valve at the top of the gear reducer and add as needed.

**CHANGE OIL ONCE EVERY 6 MONTHS.**

*110 lb. Laundry Dryer (Front Exploded View) (Illustration)*

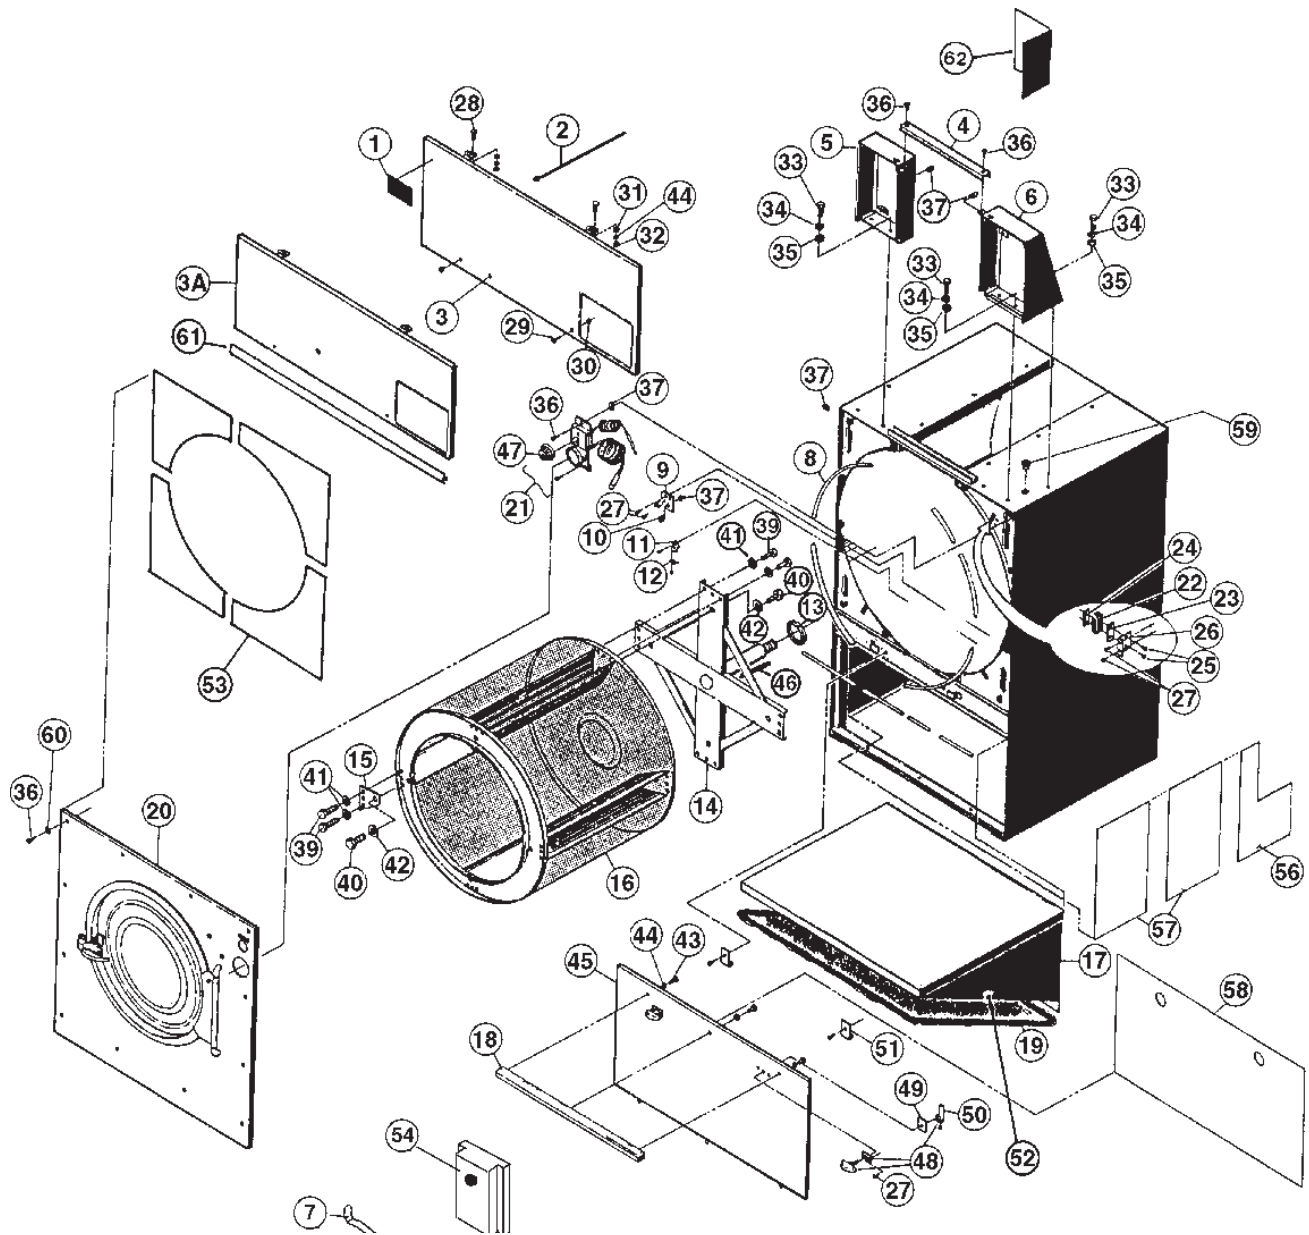


**Parts—110 lb. Laundry Dryer (Front Exploded View)**

1	TU8013	Cissell Nameplate	32	TU2842	#10 - 32 Hex Nut (Pkg. of 6)
2	TU5739	Support Rod	33	TU3246	3/8" - 16 x 1" Hex Head Screw (Pkg. of 6)
3	TU8095	Access Door "C" and "F" (Specify Color)	34	VSB134	3/8" Lockwasher (Pkg. of 6)
	TU9847	Access Door "K" and "R" (Specify Color)	35	IB140	3/8" Cut Washer
3A	TU8099	Access Door "Static Steamer" (Specify Color)	36	TU6854	#14 x 3/4" Screw
4	TU5674	Control Box Brace	37	LB74	#14 Speed Nut without Barbs
5	TU7159	Left Control Box		TU7848	#14 Speed Nut with Barbs
6	TU9866	Right Control Box	38	TU3801	Push On Speed Nut
8	K118	Gasket Set	39	TU2662	1/2" - 20 x 1 1/2" Cap Screw
9	TU2486	Thermostat Bracket	40	TU2664	5/8" - 18 x 1 1/2" Cap Screw
10	TU2477	Thermostat	41	OP251	1/2" Lockwasher
11	TU5337	Thermostat Bulb Support	42	TU5801	5/8" Lockwasher
12	F646	5/16" Clamp	43	F557	#10 - 24 x 3/8" Screw
13	TU5290	Felt Seal	44	FB187	#10 Lockwasher
14	K109	Spider "C" and "F"	45	TU5645	Lint Door (no Insulation) "C" & "K" (specify color)
	K348	Spider "K" and "R"		TU6257	Lint Door with Handles, Hardware (no Insulation) "C" & "K" (specify color)
15	TU5397	Outside Rib Plate		TU7803	Lint Door (with Insulation) "R" & "F" (specify color)
16	TU6469	Basket "C" and "F"		TU7804	Lint Door (with Insulation), Handles, and Hardware, "R" & "F" (specify color)
	TU9856	Basket "K" and "R"	46	TU9975	Basket Shaft Key
	K421	Basket and Spider "C" & "F"	47	TU490	Thermostat Knob (Fahrenheit)
	K383	Basket and Spider "K" & "R"		TU491	Thermostat Knob (Centigrade)
17	TU10345	Lint Screen Hood	48	K169	Handle Assembly
18	TU7473	Door Handle	49	TU6025	Cam Stop
19	K368	Lint Screen ONLY	50	TU3811	Cam
	K121	Wire Frame ONLY	51	TU6159	Support Clips (2 required)
20	TU7802	Front Panel Asm. "R" & "F" Gas * (specify color)	52	TU6808	Reset Button Assembly
	TU5934	Front Panel Asm. "C" & "K" Electric and Steam * (specify color)	53	TU10673	Front Panel Insulation (4 required)
	TU9895	Front Panel Asm. "K" Model * (specify color)	56	TU7691	Left Side Insulation "F" & "R"
	TU9896	Front Panel Asm. "R" Model * (specify color)	57	TU7690	Side Insulation "F" & "R" (9 required)
21	TU6030	Temperature Control *	58	TU7692	Insulation "F" "R" & "C" Gas Model
22	TU1979H	Door Switch	59	TU9209	Snap Bushing
23	TU1770	Insulation	60	RC349	1/4" Lockwasher
24	TU1771	#6 Twin Speed Nut (Pkg. of 12)	61	TU7719	Conduit Channel Cover
25	TU3219	#6 x 1" Screw	62	TU8036	Left Control Box Shield "C"
26	TU2373	Mounting Bracket	63	TU6160	Lint Screen Clip (2 required)
27	TU7733	#8 x 1/2" Screw (Pkg. of 6)	64	TU11568	Door Trim
28	TU3479	#10 - 32 x 7/16" Truss Screw			
29	FG343	Screw Fastener			
30	FG345	Retaining Washer			
31	P104	1/4" Cut Washer (Pkg. of 6)			

\* See Page 56 for Exploded View

*110 lb. Dryer (Double Motor Models) (Illustration)*

**MODELS:** L44KD42  
 L44CD42      **GAS, STEAM or**  
 L44RD42      **ELECTRIC**  
 L44FG42

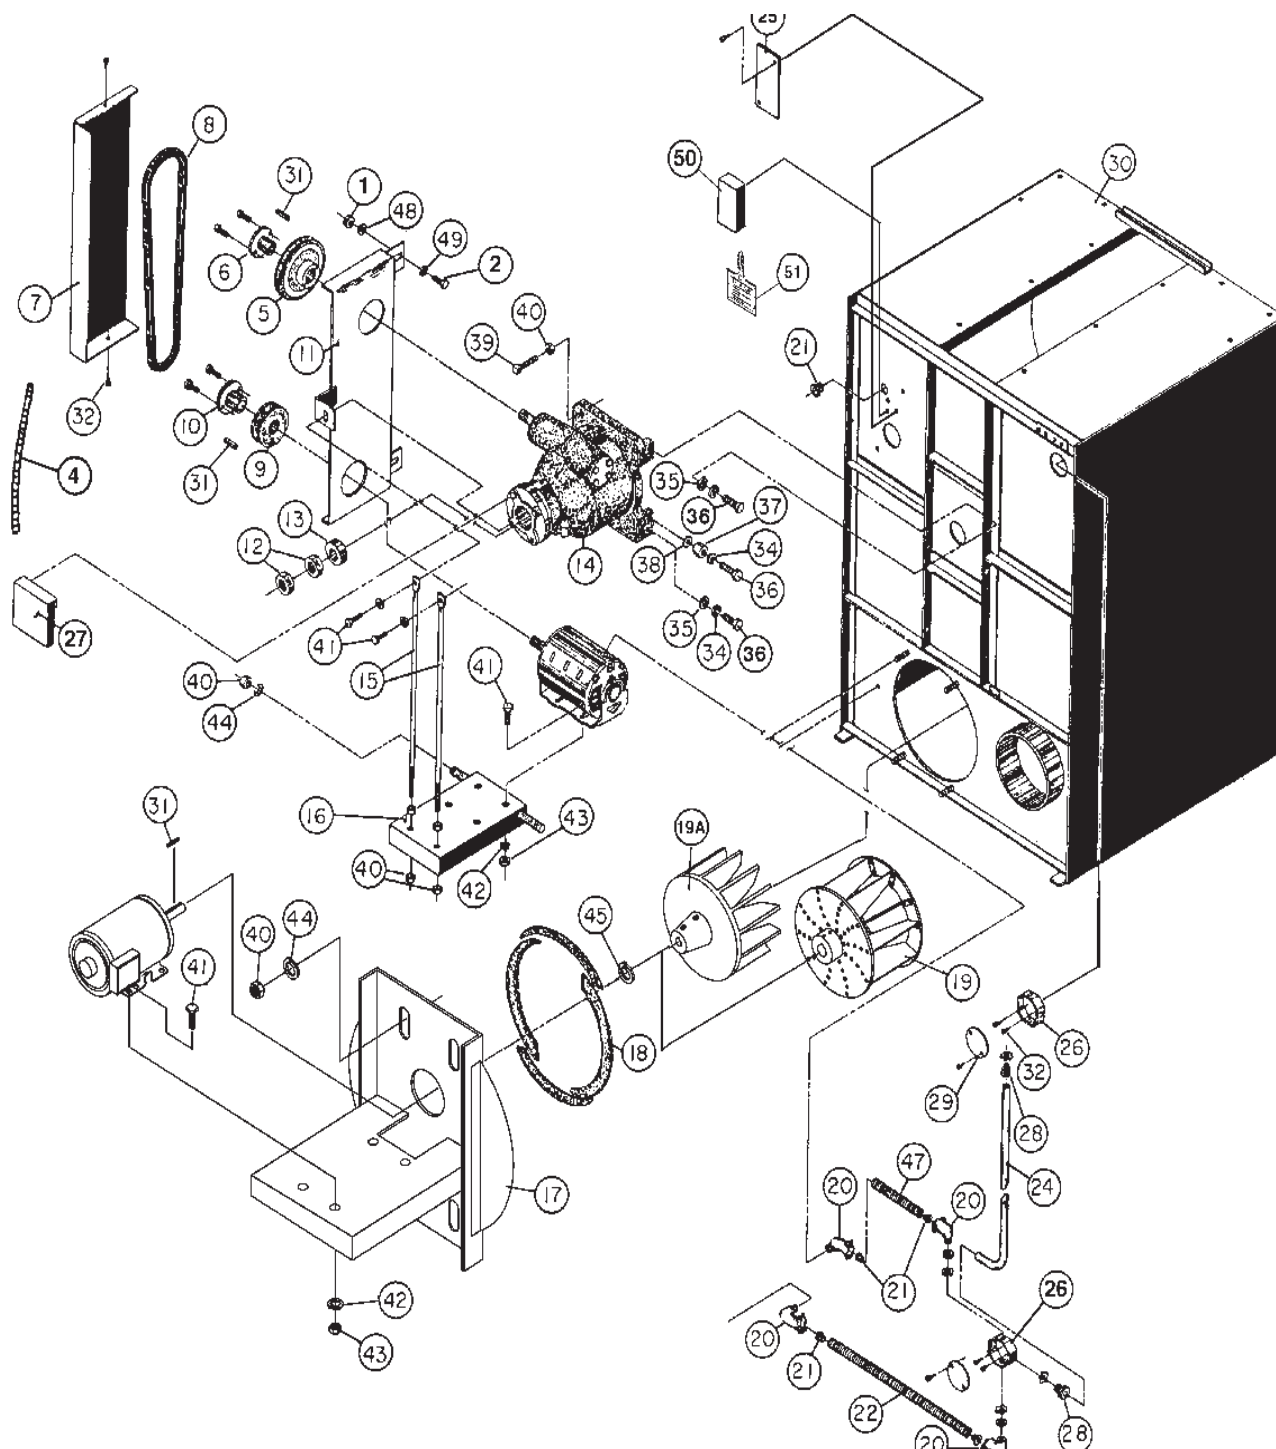

**Parts—110 lb. Laundry Dryer (Double Motor Models)**

1	TU5507	Blanking Plate "C" Model Steam Dryer	37	TU455	Cam Adjustment Nut
2	TU4967	5/16" - 18 x 1/2" Allen Set Screw	38	TU3575	7/8" Internal Tooth Lockwasher
3	TU8206	Air Switch**	39	TU5312	3/8" - 16 x 3" Square Head Set Screw
4	AT304	5/16" - 18 x 1" Set Screw	40	TU4787	3/8" - 16 Hex Nut (Pkg. of 6)
5	TU3806	Gear Sheave	41	TU5439	5/16" - 18 x 3/4" Hex Head Cap Screw (Pkg. of 6)
6	TU3807	Sheave Bushing	42	TU2814	5/16" Split Lockwasher (Pkg. of 6)
7	TU5668	Outside Belt Guard	43	C249	5/16" - 18 Hex Nut (Pkg. of 6)
8	TU2363	"V" Belt 5L500	44	TU2831	3/8" Split Lockwasher (Pkg. of 6)
9	TU2832	Motor Sheave 60 Cy.	45	TU108	Felt Seal
	TU6081	Motor Sheave 50 Cy.	47	CFB0650	1/2" Greenfield Cable (specify 6 1/2")
10	TU2833	Sheave Bushing	48	TU2846	1/4" Split Lockwasher (Pkg. of 6)
11	TU9615	Belt Guard Welded Asm.	49	TU2847	1/4" Flat Washer (Pkg. of 6)
12	TU470	Large Hex Nut (2 required)	50	TU4934	1/4" - 20 x 7/16" Hex Nut (Pkg. of 6)
13	TU6633	2-3/4" O.D. x 1- 13/32" I.D. x 3/4" Thick Washer	51	FB189	1/4" - 20 x 1" Hex Head Screw
14	TM200	Gear Reducer**	52	TU7517	Basket Shaft Cover
15	TU5328	Belt Adjusting Rod		TU10732	Prompter Housing Assembly**
16	TU4626	Basket Motor Mount Asm.	53	TU8194	Air Switch Box Cover
*17	TU5658	Motor and Fan Mount (60 Cycle)	54	TU8550	Air Switch Box
18	TU2473	Self-Sticking Gaskets (4 required)	55	TU2490	Plug Button
*19	TU403	Fan Wheel (60 Cycle)	56	TU8599	Relay (Igniter)
20	TU4791	90 Degree Angle Connector	57	TU8709	Relay Bracket
21	TU2372	Snap Bushing (not used on Steam Dryer)	58	M270	Internal Tooth Lockwasher (Pkg. of 6)
22	CFB2800	1/2" Greenfield Cable (specify 28")	59	TU3400	Hex Nut #6 - 32 x 15/16" (Pkg. of 6)
23	TU6026	Top Motor Conduit	60	TU8629	Terminal Board (Igniter)
24	TU6027	Back Motor Conduit	61	K377	Transformer with Fuse (208, 220, or 240V Primary 120V Secondary)
25	TU6028	Power Lead Conduit	62	TU8738	6 Amp Fuse
Use TU8215 Conduit on Electric Dryers ONLY			63	TU8582	Ignition Control Box Conduit Plate
26	500300644	Junction Box	64	TU2490	Plug Button 7/8"
27	TU7130	1/2" Straight Connector	65	FB187	#10 Lockwasher (Pkg. of 6)
28	TU7131	3/4" Straight Connector	66	CFB3000	1/2" Greenfield Cable - 30"
29	SB170	Junction Box Cover			
30	TU5827	Jacket Welded Assembly			
31	TU4684	Key			
32	TU7733	#8 x 1/2" Self Drinning Screw (Pkg. of 6)			
33	RC347	1/2" - 13 x 1 1/4" Hex Head Cap			
34	TU2831	1/2" Split Lockwasher (Pkg. of 6)			
35	TU1851	1/2" Flat Washer			
36	TU2195	1/2" - 13 x 1 3/4" Hex Head Cap Screw (Pkg. of 6)			

\* For 50 Cy. Motor Mount Assembly


\*\* See separate page for parts breakdown

**CAUTION**

Grease to be applied to all bearing shafts, #42-032-6015 grease Lubriplate #310, 1 lb. cans OR 14 1/2 ounce tubes - Lubriplate No. 930-2, multi-purpose grease #10098.

## Front Panel and Door Assembly (Illustration)

TU5934	Electric, Steam “C”, “K” Model (specify color)
TU7802	Gas “C”, “F” Model
TU9895	“K” Model
TU9896	“R” Model

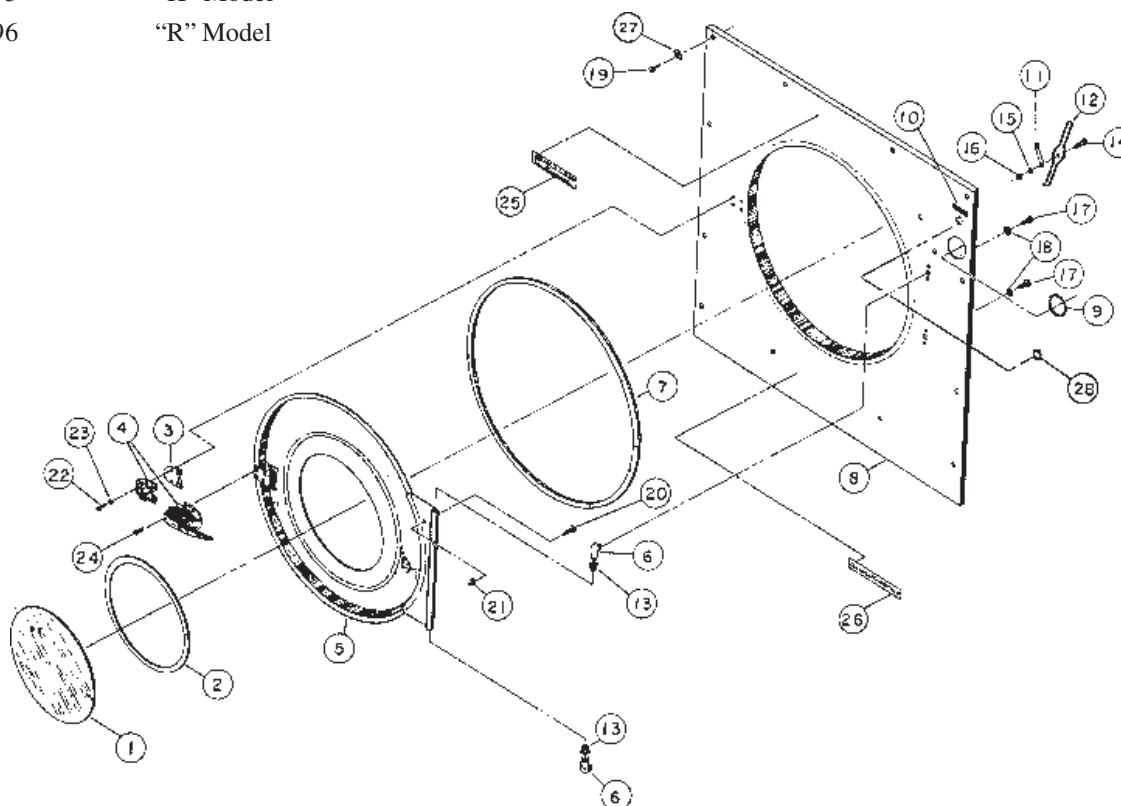


1	K105	Door Glass 15 - 3/4" (plain)	14	M262	#8 - 32 x 3/8" Truss Screw
	K105C	Door Glass 15 - 3/4" (with logo)	15	AT368	#8 Split Lockwasher
2	TU1692	Door Glass Gasket	16	TU3266	#10 - 32 Hex Nut (Pkg. of 6)
3	TU5503	Door Latch Spacer (pkg. 6)	17	TU2836	5/16" - 32 x 3/8" Hex Head Screw (Pkg. of 6)
4	TUA2319H	Door Latch with Keeper	18	TU3212	5/16" I.T. Lockwasher
5	TU5500	Door (specify color)	19	TU3209	#14 x 5/8" Pan Head Screw (Pkg. of 6)
6	TU2236	Hinge Post	20	TU4839	#10 - 32 x 3/8" Hex Head Screw (Pkg. of 6)
7	TU5288	Door Seal	21	TU4840	#10 - 32 Crown Nut (Pkg. of 6)
8	TU7801*	Front Panel "F" and "R" Model (specify color)	22	TU2687	#8 - 1/2" Phillips Head Screw
	TU6047	Front Panel "C" and "K" Model (specify color)	23	TU3785	#8 Cup Lockwasher
9	TU2641	Thermometer Gasket	24	TU2686	#8 - 32 x 3/8" Phillips Head Screw
10	TU5458	Temperature Label	25	TU7855	Instruction Nameplate
11	TU2105	Actuator Spring	26	TU7858	"Clean Lint Compartment" Nameplate
12	TU2582	Actuator	27	RC347	1/4" Lockwasher
13	PIF172	Hinge Post Bearing (2 required)	28	TU9894	Plug Button—Prompters ONLY

\* Insulation part numbers




**DUCTWORK  
HORIZONTAL OR VERTICAL**

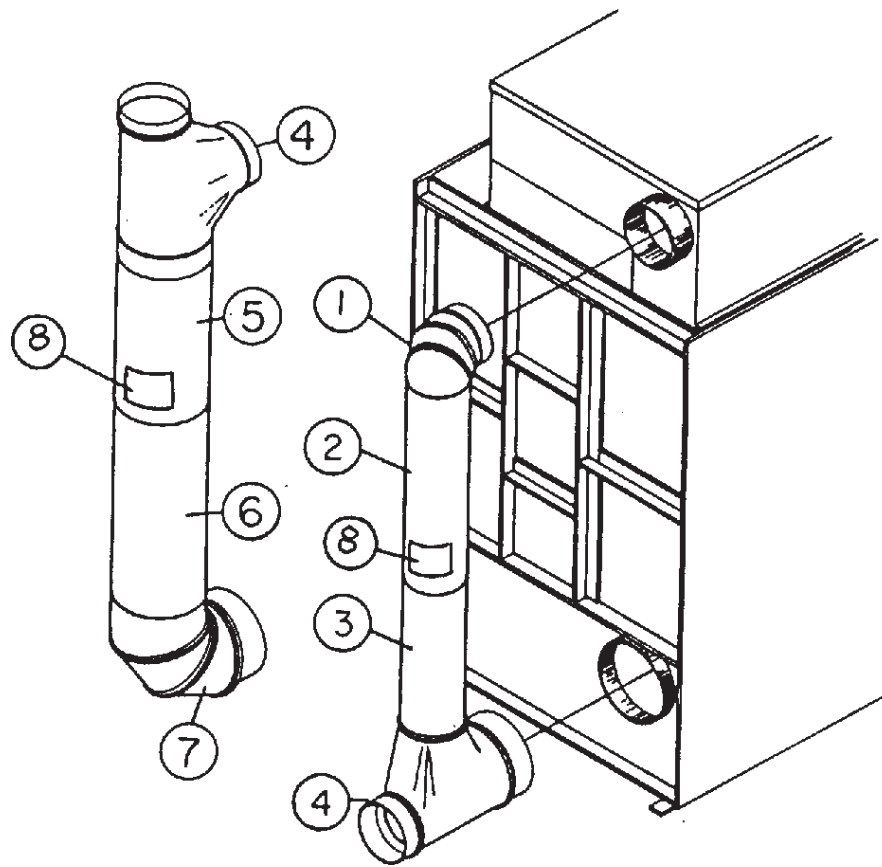

- |   |        |   |
|---|--------|---|
| 1 | TU8079 | Duct Elbow                                |
| 2 | TU8081 | Duct—Long                                 |
| 3 | TU7640 | Duct—Short                                |
| 4 | TU8228 | Duct Tee                                  |
| 5 | TU7624 | 12" Diameter Duct—24" Long                |
| 6 | TU7625 | 12" Diameter Duct—30" Long                |
| 7 | TU7626 | 12" Diameter Duct—Elbow                   |
| 8 | TU8594 | Duct Work Decal ("F" and "K" Models ONLY) |

## *Basket and Sensor Assembly—"K" and "R" Models (Illustration)*

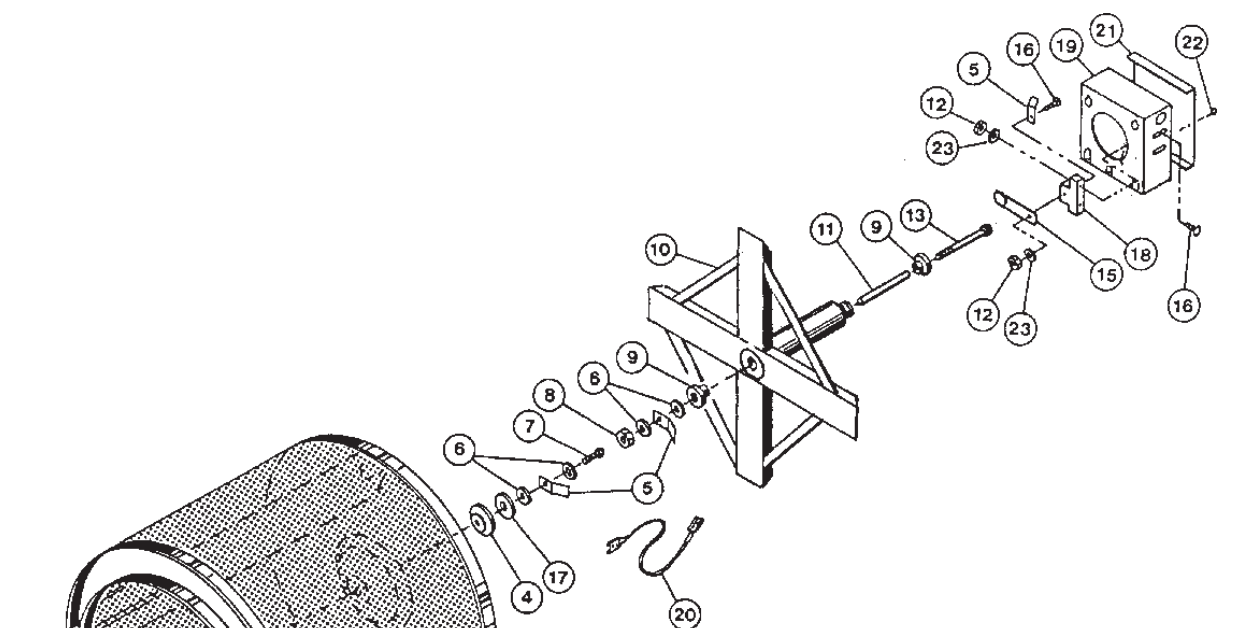


- |    |         |                                      |
|----|---------|--------------------------------------|
| 1  | TU9616  | Tip                                  |
| 2  | TU9618  | Insulator Washer                     |
| 3  | TU9856  | Prompter Basket Assembly             |
| 4  | TU9617  | Insulator Disc                       |
| 5  | AT388   | Terminal Connector                   |
| 6  | TU9910  | Ext. Tooth Lockwasher                |
| 7  | TU9949  | Machine Screw                        |
| 8  | TU3400  | #6 - 32 Brass Hex Nut<br>(Pkg. of 6) |
| 9  | TU9621  | Rod Insulator                        |
| 10 | K348    | Prompter Spider Weldment             |
| 11 | TU9854  | Sleeve                               |
| 12 | TU3266  | #8 - 32 Hex Nut (Pkg. of 6)          |
| 13 | TU9853  | Conductor Rod                        |
| 14 |         |                                      |
| 15 | TU9660  | Wiper and Button                     |
| 16 | RC353   | Machine Screw                        |
| 17 | TU9944  | Washer                               |
| 18 | TU10915 | Wiper Insulator                      |
| 19 | TU10916 | Wiper Housing                        |
| 20 | TU9628  | Jumper Wire                          |
| 21 | TU10917 | Housing Cover                        |
| 22 | TU7733  | Self Drilling Screw (Pkg. of 6)      |
| 23 | M271    | Int. Tooth Lockwasher<br>(Pkg. of 6) |

TU10732 consists of Ref. No's. 19, 21, and 22

### *Temperature Assembly (Illustration)*

TU6030—"C" Model—Consists of Ref. No. 1, 2, 3

TU9718—"K" Model—Consists of Ref. No. 1, 3

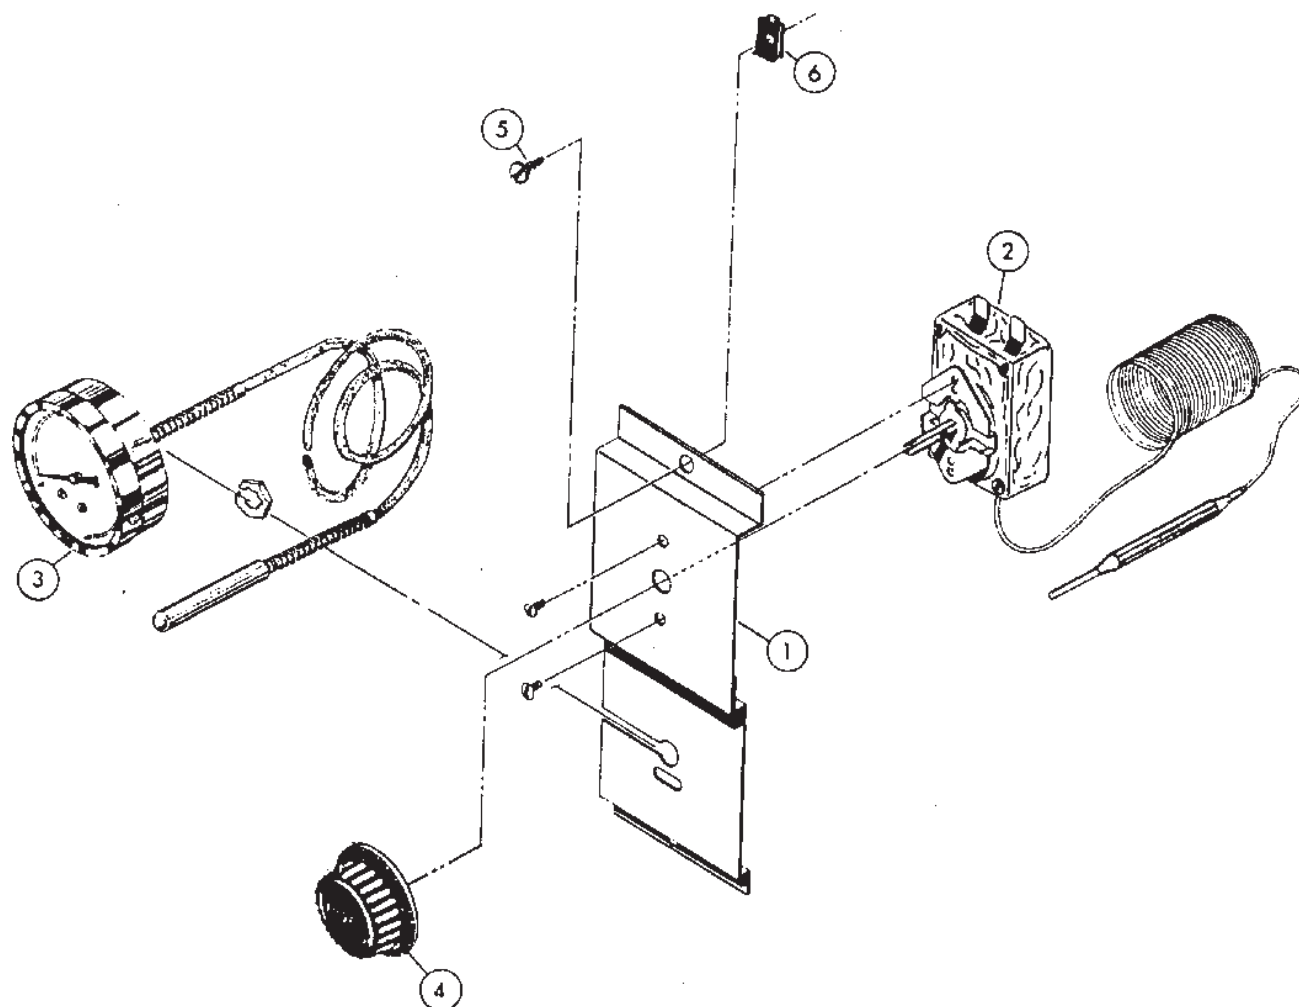

- |   |         |  |
|---|---------|--|
| 1 | TU5530  | Mounting Bracket                           |
| 2 | TU1980  | Thermostat                                 |
| 3 | TU3593  | Thermometer                                |
|   | TU3816  | Lens Replacement (Texas Gage ONLY)         |
|   | TU8475  | Lens Replacement (Marshalltown Inst. ONLY) |
|   | TU11193 | Lens Replacement (Weiss—consult factory)   |
|   | TU13213 | Lens Replacement (Weiss—consult factory)   |
| 4 | TU490   | Thermostat Knob (Fahrenheit)               |
|   | TU491   | Thermostat Knob (Centigrade)               |
| 5 | TU3209  | #14 x 5/8" S.M.S. (Pkg. of 6)              |
| 6 | TU7848  | #14 Tinnerman Clip                         |


# *Fan Motor Mount Assembly—50 Hz. Models (Illustration)*

**TU8826—208 or 440V/50/3**

**TU6006—240/415V/50/3**

**TU11609—220/380/50/3**


**TU10653—200/346/50/3**

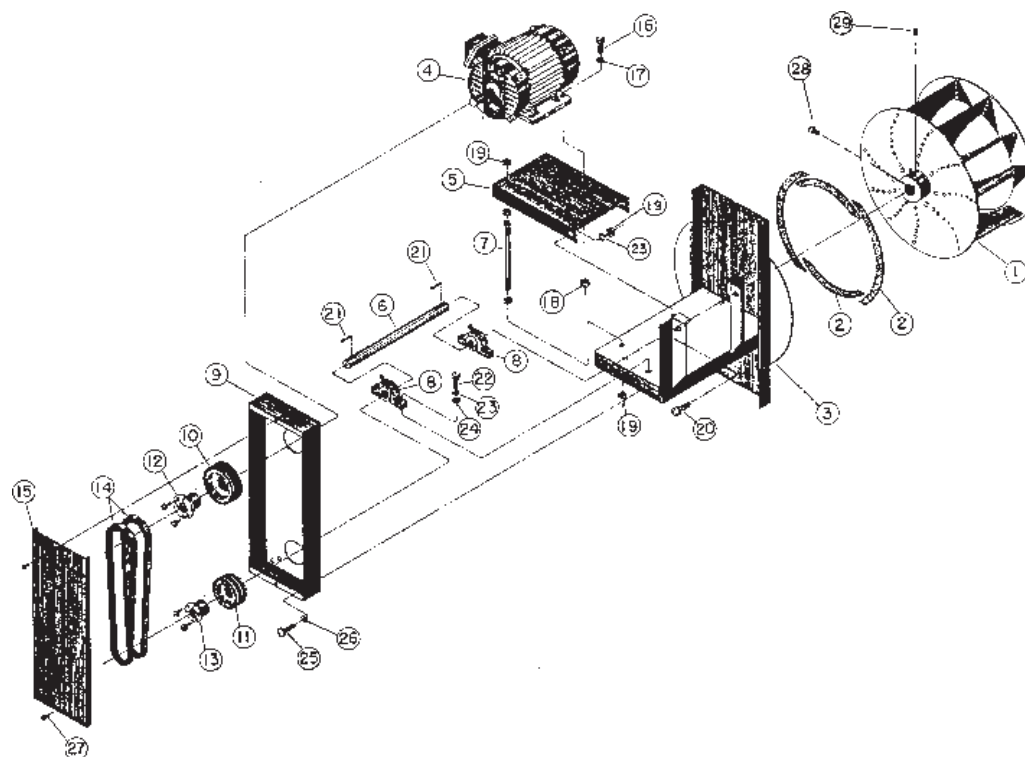

1	TU6086	50 Cycle Fan with Set Screws	17	TU2814	5/16" Split Lockwasher (Pkg. of 6)
2	TU2473	Self Sticking Gaskets (2 Sets required)	18	V56	5/16" - 24 Hex Nut (Pkg. of 6)
3	TU5659	50 Cycle Motor Mount	19	TU4787	3/8" - 16 Hex Nut (Pkg. of 6)
4		Motor: Specify Motor No. and Voltage	20	TU3246	3/8" - 16 x 1" Hex Head Screw (Pkg. of 6)
5	TU4706	Motor Mount Plate	21	TU4684	1 1/2" Key
6	TU1693	Jack Shaft	22	OP380	3/8" - 16 x 1 1/2" Hex Head Screw
7	TU1950	Motor Support Rod (2 required)	23	VSB134	3/8" Split Lockwasher (Pkg. of 6)
8	SB138	Pillow Block (2 required)	24	IB140	3/8" Flat Washer
9	TU4715	Belt Guard Weldment	25	RC344	1/4" - 20 x 3/4" Hex Head Screw
10	TU2008	Sheave 2AK46H	26	TU2847	1/4" Flat Washer (Pkg. of 6)
11	TU2009	Sheave 2AK39H	27	TU7733	#8 x 1/2" Self Drilling Screw (Pkg. of 6)
12	TU2007	H 7/8" Bushing	28	AT304	5/16" - 18 x 1" Set Screw
13	TU3807	H 3/4" Bushing	29	TU4967	5/16" - 18 x 1/2" Allen Set Screw
14	TU3393	4L280 "V" Belt (2 required)			
15	TU4716	Belt Guard Cover			
16	TU4704	5/6" - 24 x 1/4" Hex Head Screw			


**AIRSWITCHASSEMBLY  
TU8206**

- |   |        |   |
|---|--------|---|
| 1 | F888   | "E" Ring  |
| 2 | TU2463 | Actuator Arm                                      |
| 3 | TU3476 | Air Switch Decal                                  |
| 4 | TU1771 | #6 Tinnerman Nut (Pkg. of 12)                     |
| 5 | TU8155 | Air Switch  |
| 6 | TU1770 | Insulator   |
| 7 | TU8171 | Air Switch Bracket                                |
| 8 | TU7733 | #8 - 18 x 1/2" Self Drilling Screw<br>(Pkg. of 6) |
| 9 | TU3219 | #6 x 1" Round Head S.M.S.                         |

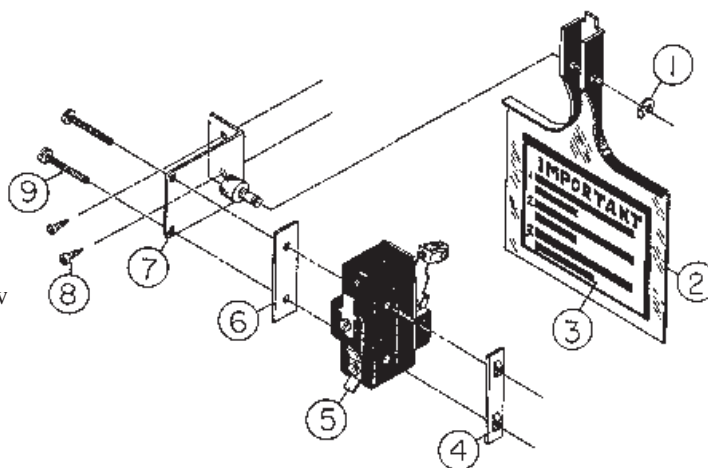


**THERMISTORASSEMBLY  
"K" and "R" Models Only  
TU12582**

- |   |         |                        |
|---|---------|------------------------|
| 1 | TU9720  | Bracket                |
| 2 | LB291   | #6 - 32 x 3/8" Screw   |
| 3 | TU2477  | High Limit Thermostat  |
| 4 | TU3624  | #6 Machine Screw       |
| 5 | TU3400  | #6 Hex Nut (Pkg. of 6) |
| 6 | TU11991 | Thermistor             |
| 7 | AT368   | #8 Lockwasher          |
| 8 | TU3801  | Speed Nut              |

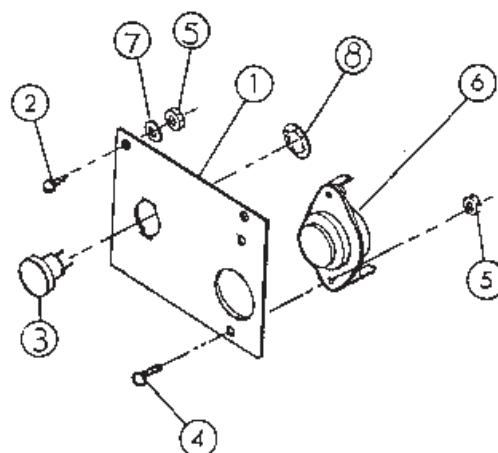

## *Non-Reversing Control Panel Assembly (Illustration)*

TU8723	Non-Reversing Control Panel 480/60/3 with 120V Controls
TU8719	Non-Reversing Control Panel 240/415/50/3 with 240V Controls
TU8721	Non-Reversing Control Panel 480/60/3 with 240V Controls
TU8718	Non-Reversing Control Panel 208/240/60/3 with 240V Controls
TU8865	Non-Reversing Control Panel 550/60/3 with 240V Controls

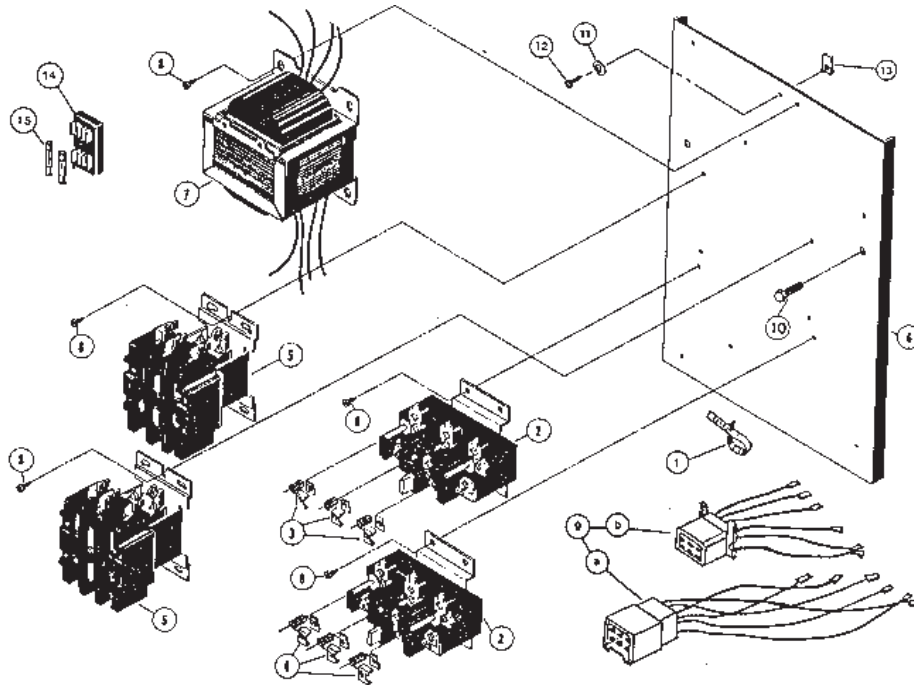

1	TU10579	Harness Clamp	9	TU8713	Wiring-Plug Type (For Dryers without Transformers)
2	TU6774	Overload Unit		TU8714	Wiring-Plug Type (For Dryers with Transformers)
3	* TU267900	Overload Heater (Fan)			
4	* TU267900	Overload Heater (Basket)			
5	** TU6965	Contactor 120V 60 Hz. (2 required)	9a	SC593	Housing-Female
	*** TU6963	Contactor 208V 60 Hz. (2 required)	9b	SC594	Housing-Male
	**** TU8727	Contactor 240V 50 Hz.	10	TU2793	1/4" - 20 x 3/4" Hex Head Screw (Pkg. of 6)
6	TU6959	Panel Plate	11	RC349	1/4" Int. Tooth Lockwasher
7	TU4660	Transformer 480/240 & 240/120	12	TU3209	#14 x 5/8" Pan Hd. Machine Screw (Pkg. of 6)
	TU4659	Transformer 575/240	13	LB74	#14 Speed Nut
	TU9804	Transformer 480/120V	14	TU10596	Fuse Holder
8	TU7733	#8 - 1/2" Self Drill Screw (Pkg. of 6)	15	TU10597	Fuses

\* To order Overload Heaters, refer to chart.

\*\* TU7281 Contactor Coil ONLY

\*\*\* TU7282 Contactor Coil ONLY

\*\*\*\* TU8689 Contactor Coil ONLY


## *Permanent Press Control Panel Assembly (Illustration)*

### **GAS OR STEAM**

TU8730	(60 Hz. 230V) F/208/230-550
TU8731	(60 Hz. 230V) Rev. F/208/230-550
TU8805	(50 Hz. 230V) F/230-415
TU8809	(50 Hz. 230V) Rev. F/230-415
TU8806	(60 Hz. 115V) F/480 Gas ONLY
TU8807	(60 Hz. 115V) Rev. F/480 Gas ONLY
TU8730	(60 Hz. 230V) F/480 Steam ONLY
TU8731	(60 Hz. 230V) Rev. F/480 Steam ONLY

### **ELECTRIC**


TU8879	(60 Hz. 230V) F/208
TU8880	(60 Hz. 230V) F/230-460-550
TU8881	(50 Hz. 230V) F/230-415
TU8882	(60 Hz. 208V) Rev. F/208
TU8883	(60 Hz. 230V) Rev. F/230-460-550
TU8884	(50 Hz. 230V) Rev. F/230-415

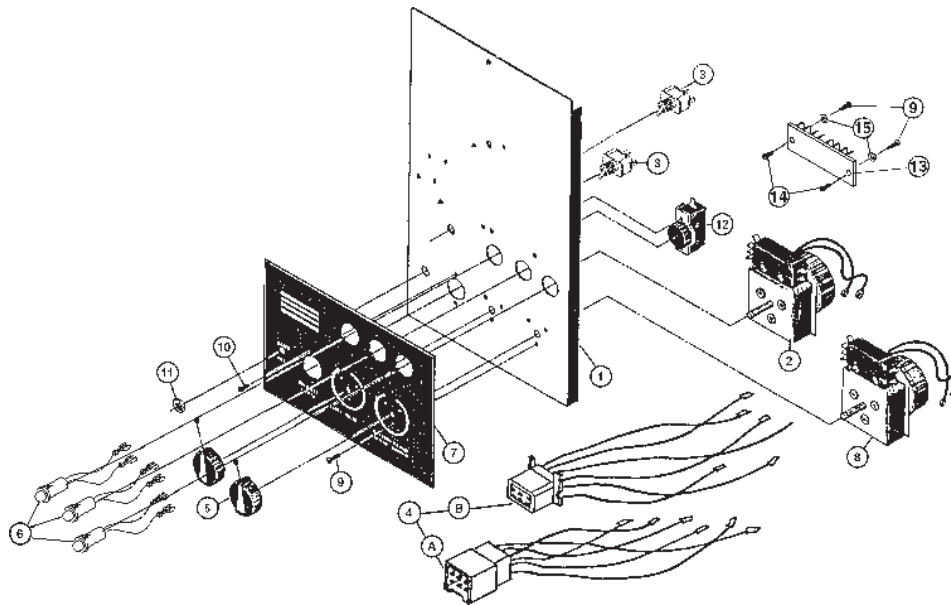

1	TU11950	Control Panel	12	TU13224	Relay 100-120V 50/60 Hz
2	K193	60 Minute Timer 240/60		TU13225	Relay 200-240V 50/60 Hz
	K188	60 Minute Timer 120/60	13	TU9028	Push Button Switch
	K192	60 Minute Timer 240/50	14	AT383	#8 - 32 x 1/2" Truss Head Screw (Pkg. of 6)
3	TU264	Toggle Switch	15	ET208	#6 - 32 x 1/4" Pan Head Screw
4	TU10579	Harness Clamp	16	M271	#8 Internal Tooth Lockwasher (Pkg. of 6)
5	TU2555	Knob Assembly	17	FG147	Toggle Switch (Reversing, Non-Reversing Controls)
6	M454	Amber lamp 240V	18	TU8712	Wiring Harness
	M102	Amber Lamp 120V	18a	SC593	Housing - Female
7	TU7673	Permanent Press Nameplate	18b	SC594	Housing - Male
	TU8154	Permanent Press Nameplate (Reversing, Non-Reversing)	19	FB187	#10 Lockwasher
8	K194	15 Minute Timer 240/60	20	TU3209	#14 x 5/8" P.H.M. Screw (Pkg. of 6)
	K189	15 Minute Timer 120/60	21	RC349	1/4 I.T. Lockwasher
	K190	15 Minute Timer 240/50/60	22	LB74	#14 Speed Nut
9	M262	#8 - 32 x 3/8" Truss Head Screw	23	TU7505	Fuseholder (2) Electric ONLY
10	TU3266	#8 - 32 Brass Hex Nut (Pkg. of 6)	24	TU8279	Fuse (2) Electric ONLY
11	TU3805	15/32" - 32 Hex Head Lock Ring			

## Control Panel and Access Door Assembly—"K" and "R" Models (Illustration)

110 lb. Dryers—Reversing and Non-Reversing

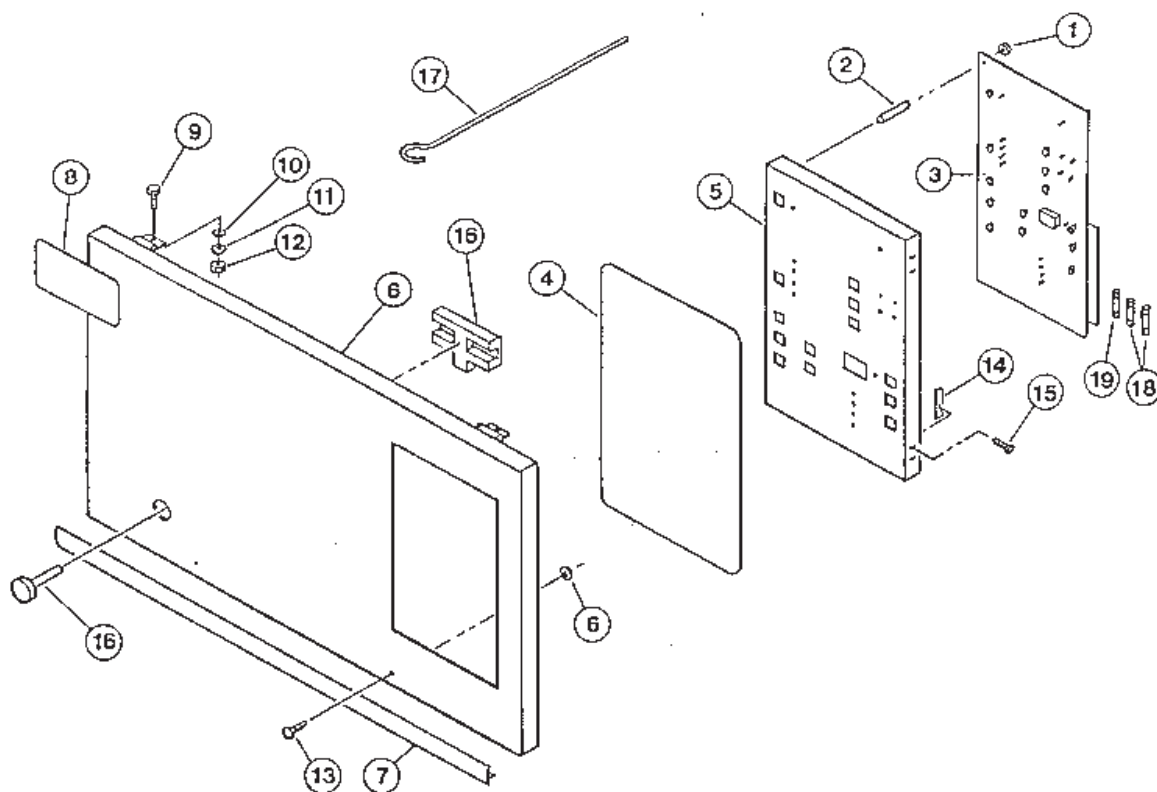


- |    |         |                               |
|----|---------|-------------------------------|
| 1  | TU3400  | #6 - 32 Brass Nut (Pkg. of 6) |
| 2  | TU12254 | Spacer                        |
| 3  | TU12105 | Reversing Control Board       |
|    | TU12106 | Non-Reversing Control Board   |
| 4  | TU12195 | Reversing Panel Label         |
|    | TU12196 | Non-Reversing Panel Label     |
| 5  | TU12842 | Control Panel                 |
| 6  | TU12841 | Access Door                   |
| 7  | TU11568 | Trim                          |
| 8  | TU8013  | Cissell Label                 |
| 9  | TU3479  | #10 - 32 Truss Head Screw     |
| 10 | P104    | 1/4" Cut Washer (Pkg. of 6)   |
| 11 | FB187   | #10 Lockwasher                |
| 12 | TU2842  | #10 - 32 Hex Nut (Pkg. of 6)  |
| 13 | FG343   | Screw Fastener                |
| 14 | TU1771  | Twin Clip Nut (Pkg. of 12)    |
| 15 | TU9524  | #6 x 5/16" Screw              |
| 16 | TU6808  | Reset Button                  |
| 17 | TU5739  | Support Rod                   |
| 18 | TU12863 | Fuse - 5 Amp.                 |
| 19 | ET235   | Fuse - 3/8 Amp.               |



## *Reversing Control Panel Assembly (Illustration)*

TU13123	Reversing Control Panel 480/60/3 with 120V Controls
TU13121	Reversing Control Panel 208/240/60/3 with 240V Controls
TU13164	Reversing Control Panel 480/60/3 with 240V Controls
TU13122	Reversing Control Panel 240/415/50/3 with 240V Controls

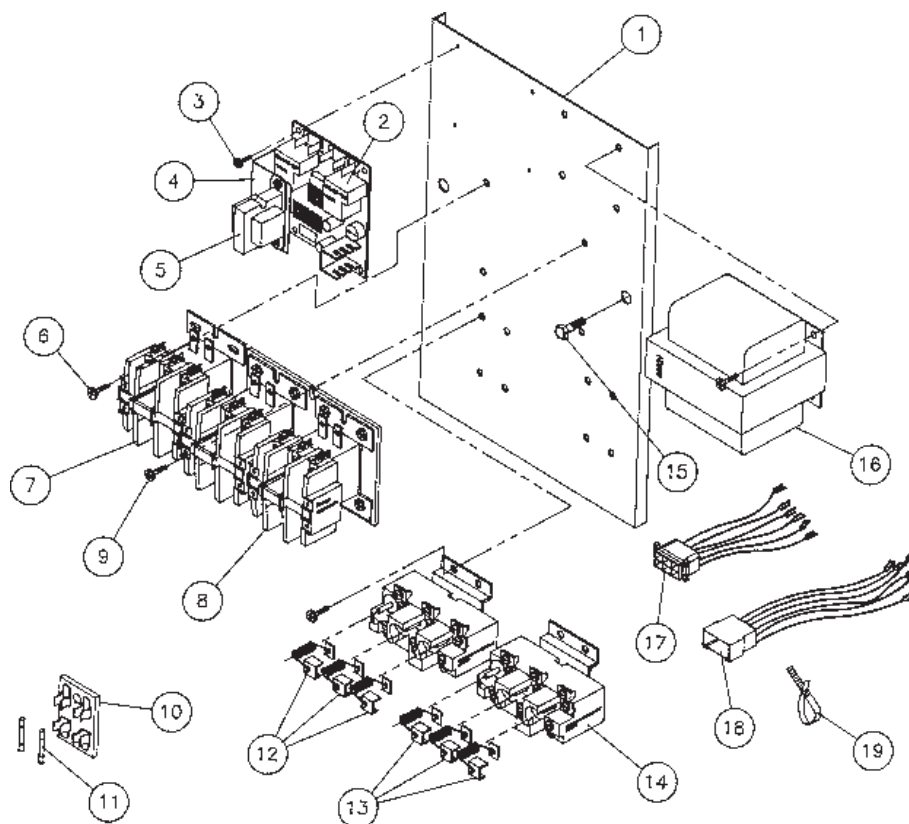


1	TU6959	Control Panel Plate	10	TU10596	Fuse Holder
2	TU12874	Electronic Reversing Timer	11	TU10597	Fuse
3	F540	#6 x 5/8" Sheet Metal Screw	12	**** TU267900	Overload Heater (fan)
4	TU13126	Transformer Mounting Plate	13	**** TU267900	Overload Heater (basket)
5	TU12989	Transformer 120V/24V	14	TU6774	Overload Unit
	TU12990	Transformer 208-240V/24V	15	RC344	1/4" - 20 x 3/4" Large Hex Head Screw
6	TU7733	#8 x 1/2" Large Self Drill Screw (Pkg. of 6)	16	TU4660	Transformer 480-240V/240-120V
7	* TU6965	Contactor 120V 60 Hz		TU4659	Transformer 575/240V
	** TU6963	Contactor 208-240V 60 Hz, 200-220V 50 Hz		TU10579	Transformer 440-480-575V/120V
	*** TU8727	Contactor 240V 50 Hz	17	SC594	Housing—Male
8	* TU7252	Rev. Contactor 120V 60 Hz	18	SC593	Housing—Female
	** TU6964	Rev. Contactor 208V - 240V 60 Hz, 200-220 V 50 Hz	19	TU10579	Harness Clamp
	*** TU8728	Rev. Contactor 240V 50 Hz		* TU7281	Contactor Coil ONLY 120V 60 Hz
9	TU2793	#8 x 3/4" Large Self Drill Screw (Pkg. of 6)		** TU7282	Contactor Coil ONLY 208-240V 60 Hz, 200-220V 50 Hz
				*** TU8689	Contactor Coil ONLY 240V 50 Hz

\*\*\*\* To order Overload Heater, refer to chart

## Gas Heating Unit—L44CD42 and L44KD42 (Illustration)

TU11948—Natural Gas Models

TU11949—L.P. Gas Models

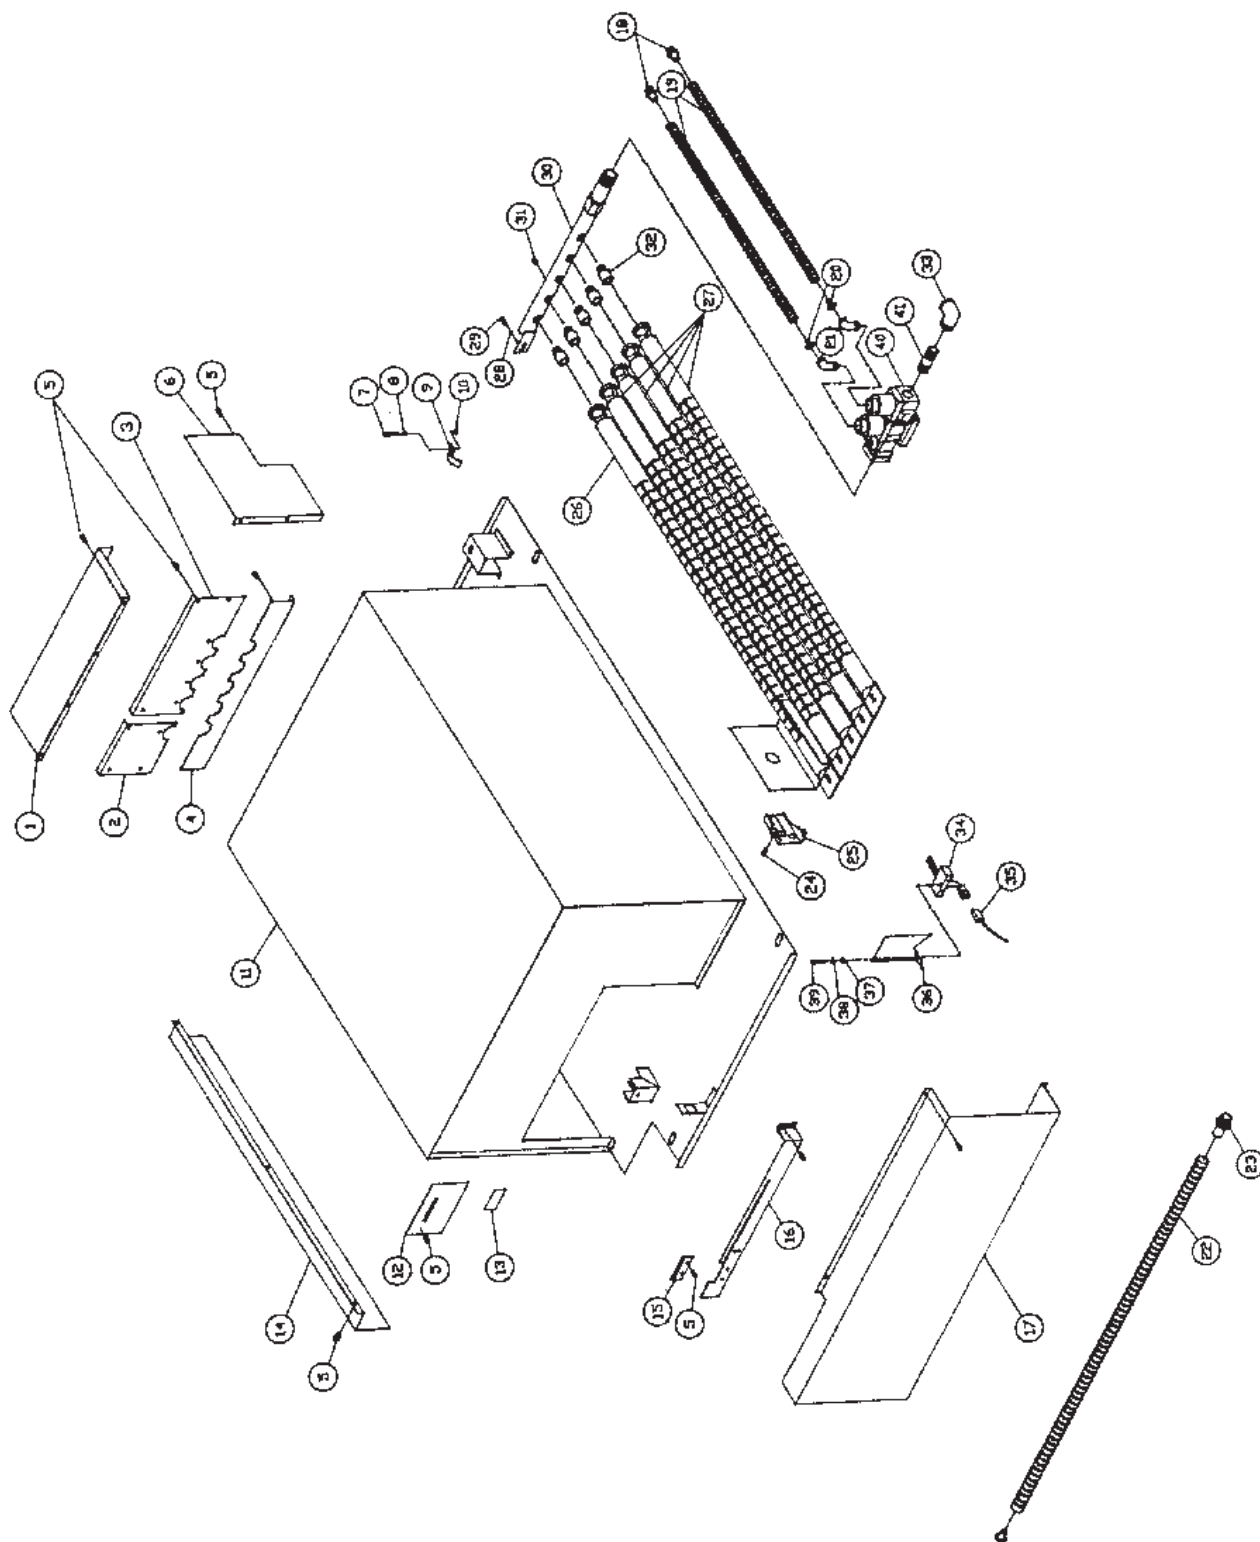

***Parts—Gas Heating Unit—L44CD42 and L44KD42***


---

1	TU8020	Rear Shield
2	TU11888	Burner Support Top, Right Side
3	TU11887	Burner Support Top, Left Side
4	TU11886	Burner Support Bottom
5	TU7733	#8 x 1/2" Self Drill Screw (Pkg. of 6)
6	TU8759	Heat Shield
7	RC344	1/4" - 20 x 3/4" Hex Head Screw
8	TU2846	1/4" Split Ring Lockwasher (Pkg. of 6)
9	PT196	3/4" Pipe Strap
10	TU4934	1/4" - 20 Hex Nut (Pkg. of 6)
11	TU11646	Bonnet
12	TU8613	Igniter Instruction Plate
13	TU8645	"Purge Gas Lines" Plate
14	TU11899	Left Side Shield
15	TU10664	Burner Holder
16	TU11827	Front Burner Support
17	TU10692	Front Shield
18	F875	3/8" Straight Connector
19	CFA1600	3/8" Cable - 16" Long
20	C170	3/8" Bushing
21	F876	3/8" - 90° Connector
22	CFB6800	1/2" Cable - 68" Long
23	TU4790	1/2" Straight Connector
24	602102180	#8 x 1/2" Screw
25	TU8598	Radiant Sensor
26	TU11619	Igniter Burner with Bracket
27	TU7881	Gas Burner
28	TU2846	1/4" Lockwasher (Pkg. of 6)
29	CB36	1/4" - 20 x 1/2" Hex Head Screw (Pkg. of 6)
30	TU9614	Gas Manifold
31	TU2224	1/8" Plug
32	TU3539	Burner Orifice (specify Drill Size)
33	TU10623	3/4" x 1/2" 90° Elbow
34	TU8596	Igniter
35	TU8605	Molex Wire Connector
36	TU11851	Burner Shield
37	TU4820	3/16" x 1/2" Cut Washer
38	M271	#8 Lockwasher (Pkg. of 6)
39	TU3416	#8 x 1 1/4" Screw (Pkg. of 6)
40	TU13187	1/2" Combination Gas Valve (Natural Gas)
	TU13188	Kit (Natural Gas to LP Gas)
	TU13373	1/2" Combination Gas Valve (L.P. Gas)
	TU13632	Kit (LP Gas to Natural Gas)
		(Above kits do not include orifices)
41	OP290	1/2" x 2" Nipple

## Gas Heating Unit—L44FD42 and L44RD42 (Illustration)

TU11960—Natural Gas Models

TU11961—L.P. Gas Models

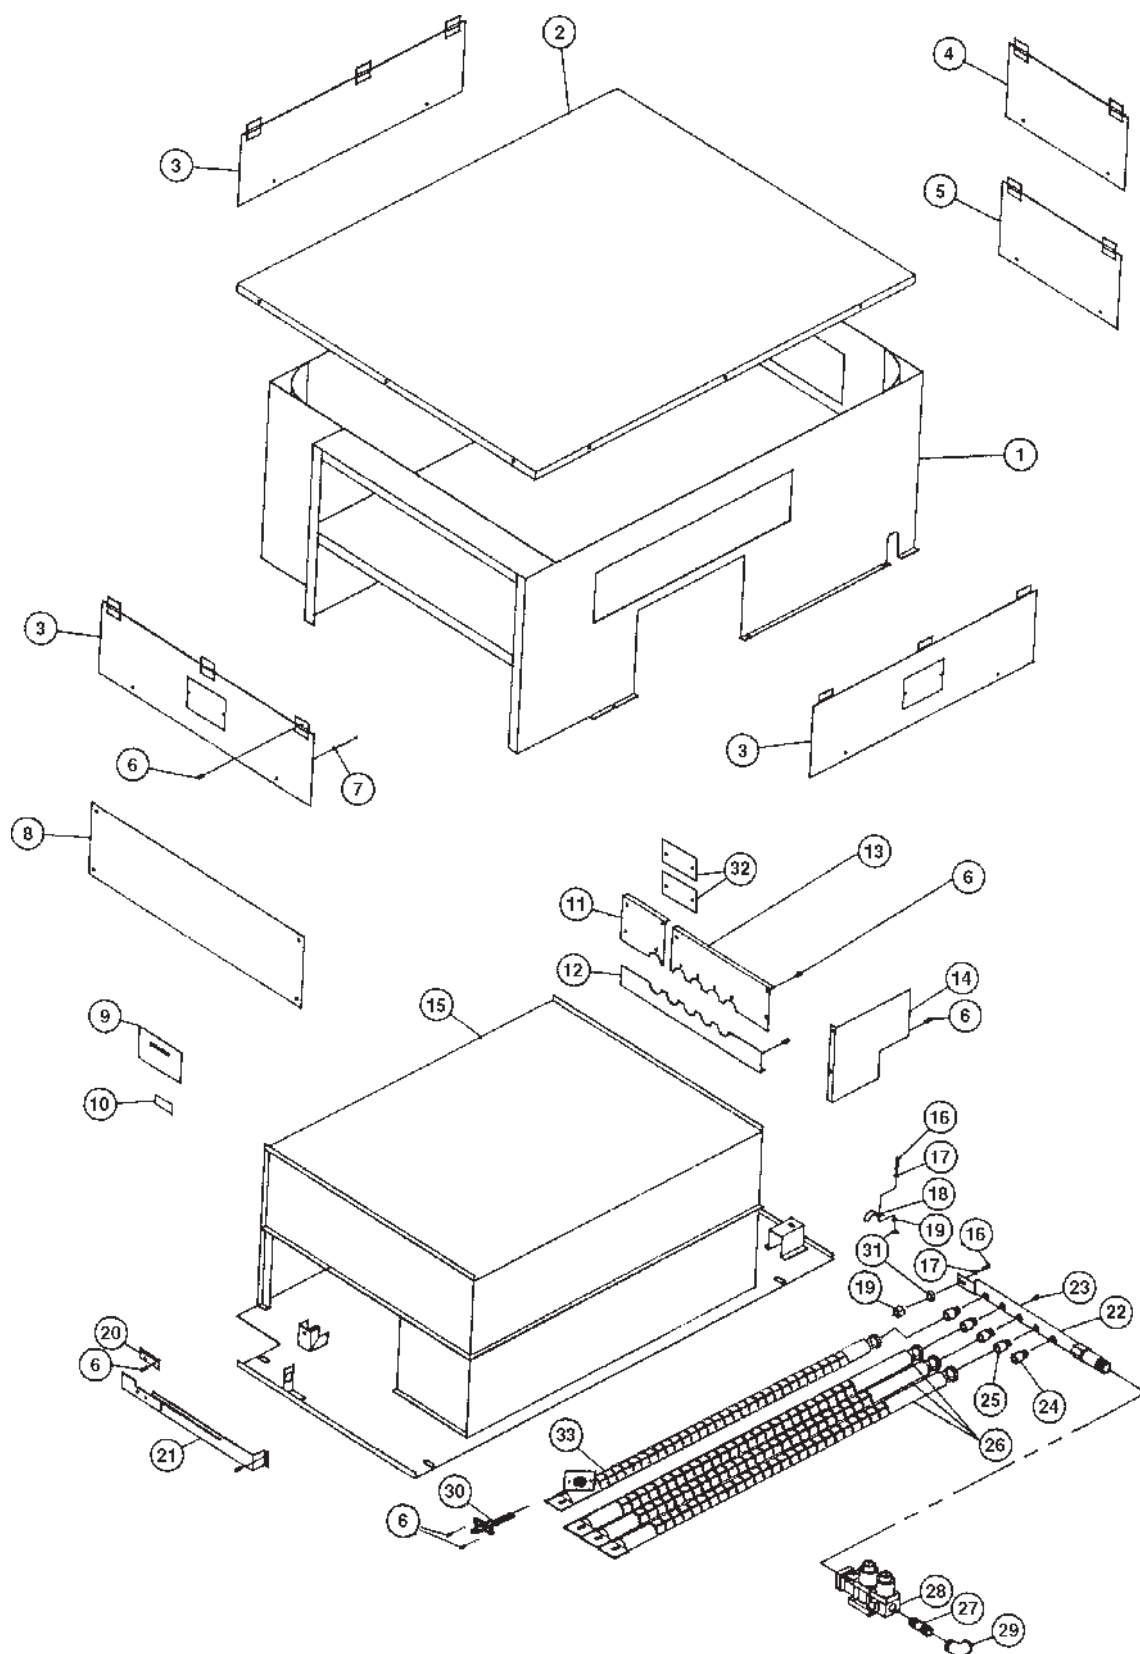


***Parts—Gas Heating Unit—L44FD42 and L44RD42***

---


1	TU8156	Bonnet Enclosure
2	TU7555	Enclosure Top
3	TU12042	Cover with Clean Out Label
4	TU12043	Rear Cover with Clean Out Label
5	TU12046	Lower Rear Cover with Label
6	TU7733	#8 - 18 x 1/2" Self Drill Screw (Pkg. of 6)
7	TU8577	#8 Speed Nut
8	602102180	#8 Sheet Metal Screw
9	TU8613	Ignition Instructions Label
10	TU8645	"Purge Gas Line" Label
11	TU11890	Burner Support Top Right Side
12	TU11886	Burner Support Bottom
13	TU11887	Burner Support Top Left Side
14	TU8759	Heat Shield
15	TU11874	Bonnet
16	RC344	1/4" - 20 x 3/4" Hex Screw
17	TU2846	1/4" Lockwasher (Pkg. of 6)
18	PT196	Strap
19	TU4934	1/4" Hex Nut (Pkg. of 6)
20	TU10664	Burner Holder
21	TU11897	Front Burner Support
22	F875	3/8" Straight Connector
23	CFA1600	3/8" Cable - 16" Long
24	C170	3/8" Cable Bushing
25	F876	3/8" Angle Connector
26	CFB6800	1/2" Cable - 68" Long
27	TU4790	1/2" Straight Connector
28	602102180	#8 Sheet Metal Screw (Pkg. of 6)
29	TU8598	Radiant Sensor
30	TU11619	Ignition Burner with Bracket
31	CB36	1/4" - 20 x 1/2" Hex Screw
32	TU9614	Gas Manifold
33	TU2224	1/8" Pipe Plug
34	TU10946	Manifold Plug
35	TU3539	Gas Orifice (specify Drill Size)
36	TU7881	Burner
37	OP290	1/2" x 2" Nipple
38	TU13187	Gas Valve (Natural Gas)
	TU13373	Gas Valve (L.P. Gas)
	TU13188	Kit (Natural Gas to LP Gas)
	TU13632	Kit (LP Gas to Natural Gas)
		(Above kits do not include orifices)
39	TU10623	3/4" x 1/2" 90° Elbow
40	TU3416	#8 x 1 1/4" Screw (Pkg. of 6)
41	M271	#8 Lockwasher (Pkg. of 6)
42	TU4820	Cut Washer
43	TU11851	Burner Shield
44	TU8605	Wire Connector
45	TU8596	Igniter
46	TU7607	Front Lower Cover

*TU8134—Steam Bonnet (4 Coil) (Illustration)*

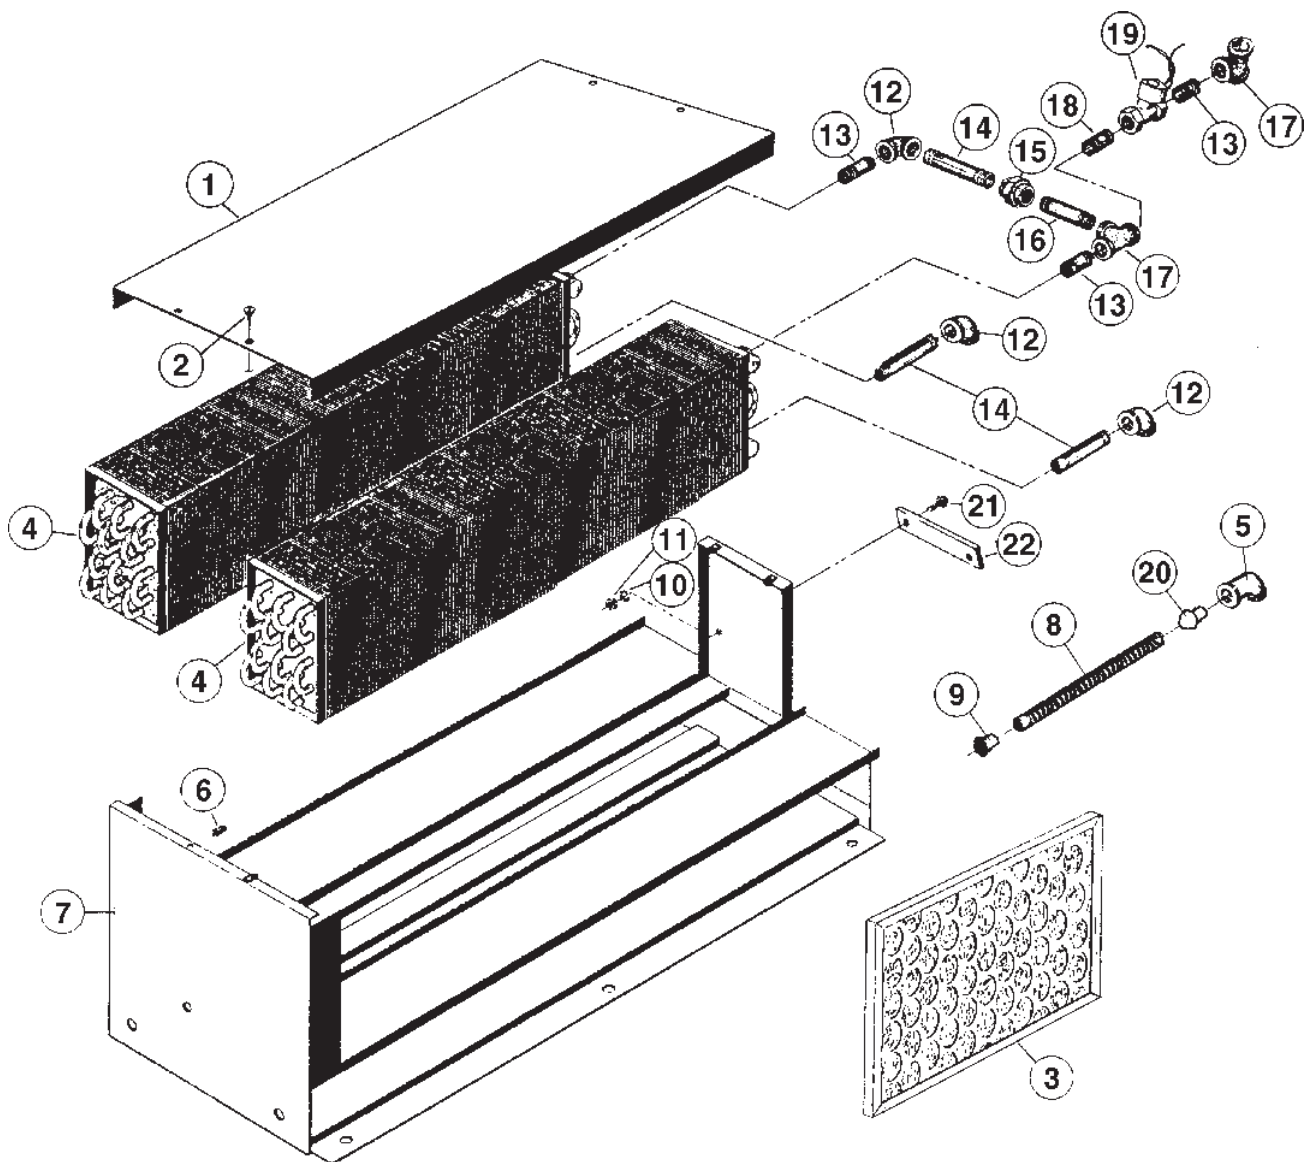

1	TU7393	Top Plate	14	TU4610	3/4" x 5" Nipple
2	TU3209	#14 x 5/8" Sheet Metal Screw (Pkg. of 6)	15	TU4600	3/4" Union
3	TU6458	Air Filter (4 required)	16	TU4620	3/4" x 4 1/2" Nipple
4	TU1699	Steam Coil (4 Coil)	17	TU4597	3/4" Tee
6	LB74	#14 Speed Nut	18	TU5914	3/4" x 3 1/2" Nipple
7	TU8082	Bonnet Weldment	19	TU5924	Solenoid Valve (240V)
10	TU2846	1/4" Lockwasher (Pkg. of 6)		TU6763	240V Coil ONLY
11	TU4934	1/4" - 20 x 7/16" Hex Nut (Pkg. of 6)		TU5939	208V Coil ONLY
12	TU4605	3/4" Elbow		TU10289	200V Coil ONLY
13	TU4608	3/4" x 2" Nipple	20	390401031	3/4" x Close Nipple
			24	FB189	1/4" - 20 x 1" Hex Head Screw
			25	TU5726	Rear Coil Holder


# *TU8135—Steam Bonnet (6 Coil) (Illustration)*

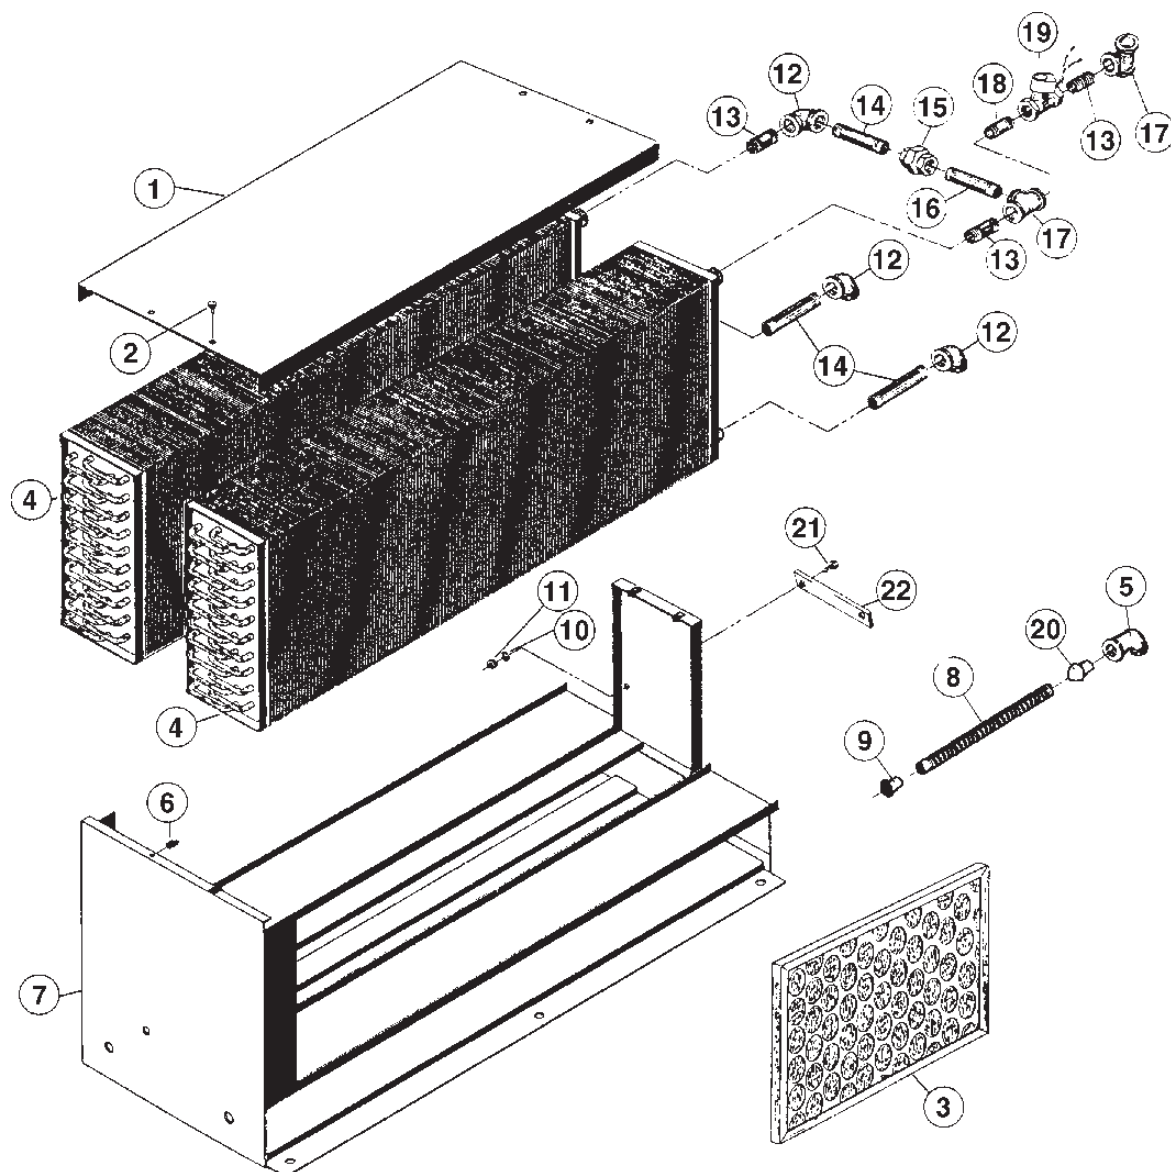

1	TU7393	Top Plate	14	TU4610	3/4" x 5" Nipple
2	TU3209	#14 x 5/8" Sheet Metal Screw (Pkg. of 6)	15	TU4600	3/4" Union
3	TU6080	Air Filter (4 required)	16	TU4620	3/4" x 4 1/2" Nipple
4	TU2808	Steam Coil (6 Coil)	17	TU4597	3/4" Tee
6	LB74	#14 Speed Nut	18	TU5914	3/4" x 3 1/2" Nipple
7	TU8083	Bonnet Weldment	19	TU5924	Solenoid Valve (240V)
10	TU2846	1/4" Lockwasher (Pkg. of 6)		TU6763	240V Coil ONLY
11	TU4934	1/4" - 20 x 7/16" Hex Nut (Pkg. of 6)		TU5939	208V Coil ONLY
12	TU4605	3/4" Elbow		TU10289	200V Coil ONLY
13	TU4608	3/4" x 2" Nipple	20	390401031	3/4" x Close Nipple
			24	FB189	1/4" - 20 x 1" Hex Head Screw
			25	TU5726	Rear Coil Holder



## *Electric Heating Unit (Illustration)*

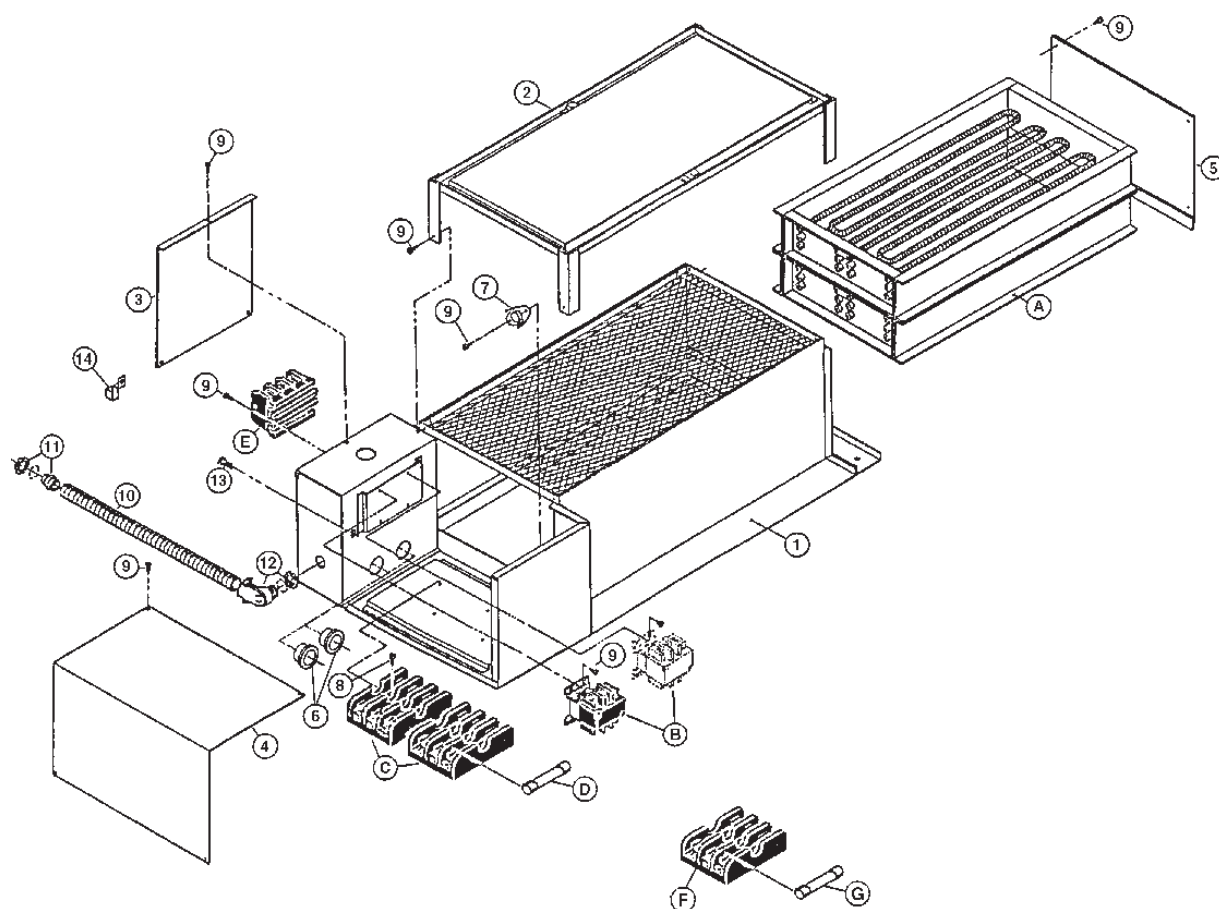


1	TU7098	Bonnet Weldment (480V and up)
	TU11785	Bonnet Weldment
2	TU7113	Top Weldment
3	TU7122	Terminal Cover (480V and up)
	TU9908	Terminal Cover
4	TU7121	Rear Cover (480V and up)
	TU9909	Rear Cover
5	TU7118	Front Cover
6	TU5958	Bushing
7	TU7089	Thermostat (300° F)
8	TU2793	#8 x 5/8" Screw (Pkg. of 6)
9	TU7733	#8 x 1/2" Screw (Pkg. of 6)
10	CFB1500	1/2" Greenfield Cable (15" Long)
11	TU4790	Straight Connector
12	TU4791	90° Connector
13	CB36	1/4" - 20 x 1/2" Screw (Pkg. of 6)
14	TU7737	Grounding Lug

A, B, C, D, E, and F      see opposite page



**Parts—TM200—Large Gear Reducer with Bronze Teeth**

---

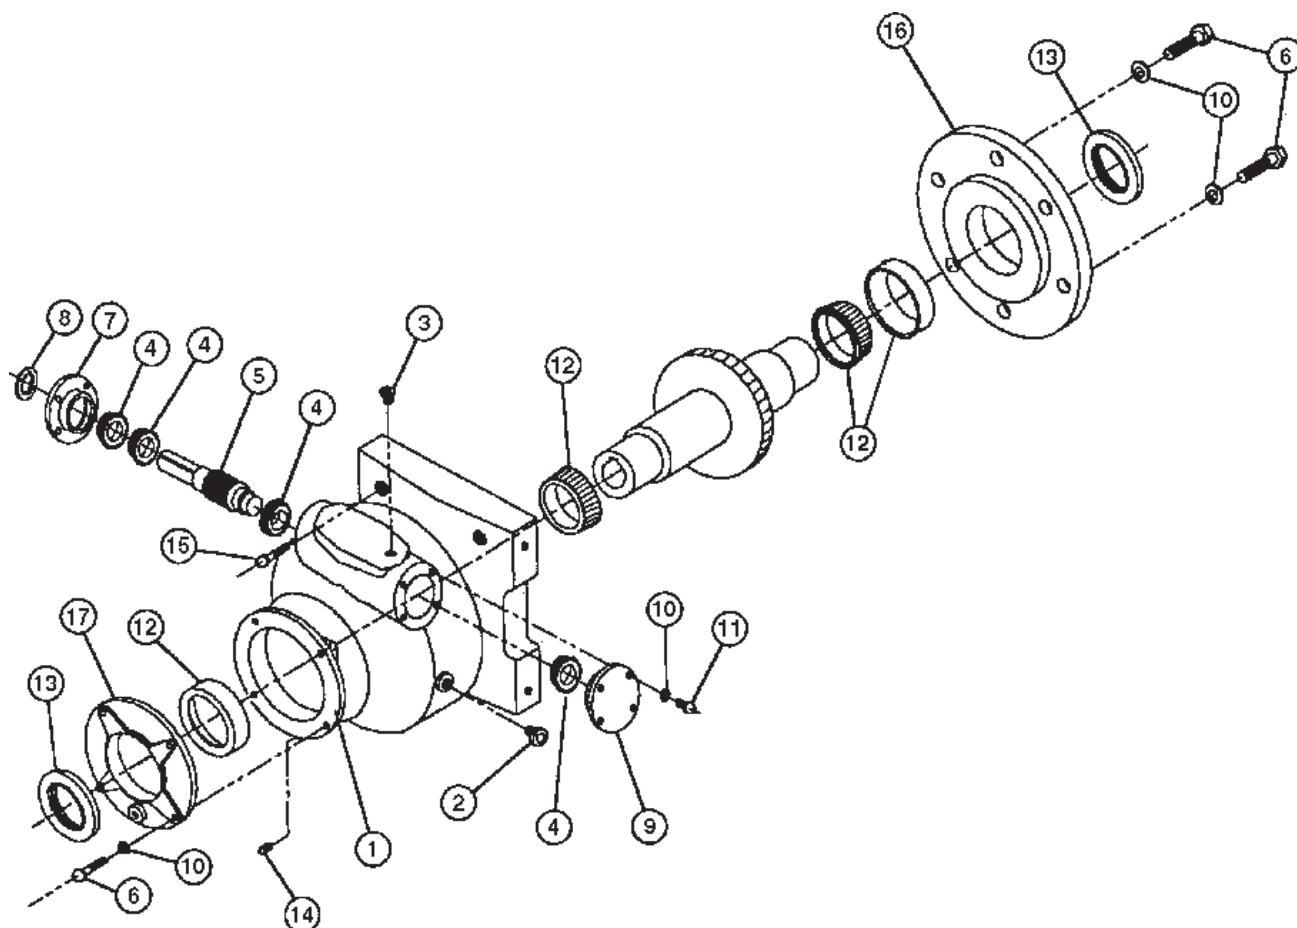

1	TM203	Housing	10	VSB134	3/8" Split Lockwasher (Pkg. of 6)
2	K474	Oil Level Plug Kit	11	TU3246	3/8" - 16 x 1" Cap Screw (Pkg. of 6)
3	TM119	1/4" Vent Plug	12	TM217	Large Bearing Cone & Cup
4	TM208	Small Bearing Cone & Cup	13	TM220	Large Klosure
5	TM225	Worm & Worm Gear	14	TM221	1/4" Pipe Plug
6	IB139	3/8" - 16 x 1 1/4" Cap Screw	15	TU5312	3/8" x 3" Set Screw
7	TM205	Small Open End Cap	16	TM211	Large End Cap 10 1/2 Dia.
8	TM204	Small Klosure	17	TM212	Small End Cap 6 3/4 Dia.
9	TM218	Small Closed End Cap			

TM225 Worm and Worm Gear Set (for TM200 ONLY) (only sold as set)

Not Illustrated—TU3465 one pint of Cissell Transmission Oil

### *110 lb. Dryer Electric Heating Unit*

Rated Heater Input	Heater Amps, Motor Amps, Controls Amps, Total Amperes at Rated Voltage	HZ.	Minimum Size Supply Wire Based on 60° C (140° F) Insulated Copper Conductor	Circuit Minimum Conduit Trade Size	Branch Circuit Maximum Fuse Size
60KW @ 208V/3Ph	177 Amps	60	0000 AWG	2 1/2"	200
60KW @ 240V/3Ph	153 Amps	60	00 AWG	2"	175
60KW @ 480V/3Ph	77 Amps	60	3 AWG	1 1/4"	80
60KW @ 240V/415V/3Ph	154/88 Amps	60	000/2 AWG	2/1 1/4"	175/90
60KW @ 575V 3Ph	63 Amps	60	4 AWG	1 1/4"	70
80KW @ 208V/3Ph	232 Amps	60	300 AWG	2 1/2"	250
80KW @ 240V/3Ph	201 Amps	60	250 AWG	2 1/2"	225
80KW @ 480V/3Ph	100 Amps	60	1 AWG	1 1/2"	100
80KW @ 240/415V/3Ph	202/116 Amps	50	250 MCM / 0 AWG	2 1/2"	225
80KW @ 575V/3Ph	84 Amps	60	4 AWG	1 1/4"	90

Electric Bonnet Description	Ref. No. (A) Electric Heater Elements	Ref. No. (B) Contractor	Ref. No. (C) Fuse Holder	Ref. No. (D) Fuses, Heater	Ref. No. (E) Terminal Block	Ref. No. (F) Fuse, Motor and Controls
TU11807, 60KW 208V/60/3	HE10810 (2 each) 40KW/240V	TU6963 (4 each)	TU8201 (5 each)	TU11627 (12 each)	TU8734	TU819712 (3 each)
TU11808, 60KW 240V/50/60/3	HE11080 (2 each) 30KW/240V	TU6963 (4 each)	TU8201 (5 each)	TU11627 (12 each)	TU8734	TU819709 (3 each)
TU11790, 80KW 240V/50/60/3	HE10810 (2 each) 40KW/240V	TU6963 (4 each)	TU11096 (4 each) TU8201 (1 each)	TU7223 (12 each)	TU8734	TU819709 (3 each)
TU7096, 60KW 480V/3	HE11080 (2 each) 30KW/240V	TU9169 (1 each)	TU9141 (1 each)	TU7090 (3 each)	TU8734	
TU7097, 60KW 480V/3	HE10810 (2 each) 40KW/240V	TU9170 (1 each)	TU9141 (2 each)	TU7071 (6 each)	TU8734	
TU11806, 80KW 240/415/50/3	HE10810 (2 each) 40KW/240V	TU6963 (4 each)	TU11096 (4 each) TU8200 (1 each)	TU7223 (6 each)	TU8734	TU819907 (3 each)
TU11809, 60KW 240/415/50/3	HE10810 (2 each) 30KW/240V	TU6963 (4 each)	TU8201 (4 each) TU8200 (1 each)	TU11627 (12 each)	TU8734	TU819907 (3 each)
TU8866, 60KW 550V/3	HE11540 (2 each) 30KW/275V	TU9169 (1 each)	TU9141 (1 each)	TU7090 (3 each)	TU8734	
TU9351, 80KW 550V/3	HE10610 (2 each) 40KW/275V	TU9170 (1 each)	TU9141 (2 each)	TU7071 (6 each)	TU8734	
TU11789, 80KW 208V/60/3	HE10610 (2 each) 40KW/208V	TU6963 (4 each)	TU11096 (4 each) TU8201 (1 each)	TU7224 (12 each)	TU8734	TU819712 (3 each)

## Ordering Overload Heaters for Overload Relays

### ORDERING OVERLOAD HEATERS FOR OVERLOAD RELAYS

Properly sized Overload Heaters provide motor protection for the dryer. Improper heater size may allow the motor to be damaged, or could cause nuisance tripping.

Heater sizes are listed on the Overload Heater Table on page 50. To use the table, refer to the Motor Rating Plate and locate the Full Load Amps (FLA), the Service Factor (SF), and the Ambient Temperature (Amb.).

#### Example

Motor Rating Plate show FLA = 3.8, SF = 1.15, and 60 Deg. C Amb.

From the table, heater size is H-25. Order TU267900 - H25.

#### CAUTION

**Overload Relays do not provide protection from short circuits. Short circuit protection is provided by a device such as a breaker or wall disconnect.**

**OVERLOAD HEATER TABLE**  
**Motor Full Load Amps (FLA)**

Heater Size (TU2679) N/REV REV		SF = 1.00		SF = 1.15 OR GREATER	
		40 Deg. C Amb.	60 Deg. C Amb. or more	40 Deg. C Amb.	60 Deg. C Amb. or more
H-6	H-7	.69 - .74	.56 - .61	.62 - .68	.51 - .55
H-7	H-8	.75 - .83	.62 - .68	.69 - .74	.56 - .61
H-8	H-9	.84 - .93	.69 - .74	.75 - .83	.62 - .68
H-9	H-10	.94 - 1.02	.75 - .83	.84 - .93	.69 - .74
H-10	H-11	1.03 - 1.16	.84 - .93	.94 - 1.02	.75 - .83
H-11	H-12	1.17 - 1.31	.94 - 1.02	1.03 - 1.16	.84 - .93
H-12	H-13	1.32 - 1.45	1.03 - 1.16	1.17 - 1.31	.94 - 1.02
H-13	H-14	1.46 - 1.63	1.17 - 1.31	1.32 - 1.45	1.03 - 1.16
H-14	H-15	1.64 - 1.80	1.32 - 1.45	1.46 - 1.63	1.17 - 1.31
H-15	H-16	1.81 - 1.96	1.46 - 1.63	1.64 - 1.80	1.32 - 1.45
H-16	H-17	1.97 - 2.22	1.64 - 1.80	1.81 - 1.96	1.46 - 1.63
H-17	H-18	2.23 - 2.43	1.81 - 1.96	1.97 - 2.22	1.64 - 1.80
H-18	H-19	2.44 - 2.55	1.97 - 2.22	2.23 - 2.43	1.81 - 1.96
H-19	H-20	2.56 - 2.81	2.23 - 2.43	2.44 - 2.55	1.97 - 2.22
H-20	H-21	2.82 - 2.99	2.44 - 2.55	2.56 - 2.81	2.23 - 2.43
H-21	H-22	3.00 - 3.43	2.56 - 2.81	2.82 - 2.99	2.44 - 2.55
H-22	H-23	3.44 - 3.90	2.82 - 2.99	3.00 - 3.43	2.56 - 2.81
H-23	H-24	3.91 - 4.28	3.00 - 3.43	3.44 - 3.90	2.82 - 2.99
H-24	H-25	4.29 - 4.86	3.44 - 3.90	3.91 - 4.28	3.00 - 3.43
H-25	H-26	4.87 - 5.45	3.91 - 4.28	4.29 - 4.86	3.44 - 3.90
H-26	H-27	5.46 - 6.13	4.29 - 4.86	4.87 - 5.45	3.91 - 4.28
H-27	H-28	6.14 - 6.79	4.87 - 5.45	5.46 - 6.13	4.29 - 4.86
H-28	H-29	6.80 - 7.72	5.46 - 6.13	6.14 - 6.79	4.87 - 5.45
H-29	H-30	7.73 - 8.48	6.14 - 6.79	6.80 - 7.72	5.46 - 6.13
H-30	H-31	8.49 - 9.65	6.80 - 7.72	7.73 - 8.48	6.14 - 6.79
H-31	H-32	9.66 - 10.70	7.73 - 8.48	8.49 - 9.65	6.80 - 7.72
H-32	H-33	10.80 - 12.30	8.49 - 9.65	9.66 - 10.70	7.73 - 8.48
H-33	H-34	12.40 - 13.00	9.66 - 10.70	10.80 - 12.30	8.49 - 9.65
H-34	H-35	13.10 - 14.00	10.80 - 12.30	12.40 - 13.00	9.66 - 10.70

## ADDENDUM TO MANUAL4M - NORTON IGNITION SYSTEM

(NOTE: This replaces information about the  
24V Direct Spark Ignition System)


### OPERATION OF THE NORTON IGNITION SYSTEM

Power to the ignition system is 120 volts. It is rated voltage or on higher voltage machines the 120 volts is from a transformer. The ignition system is powered through a timer or coin meter and a thermostat which calls for heat.

The two gas valves are plumbed into a single gas line and both must open before the gas can flow into the burners.

The following diagrams are line to line schematics of the ignition system. The numbers 4, 7, 3, 9, and letters A and B are terminals on the ignition relay.

FIGURE 1

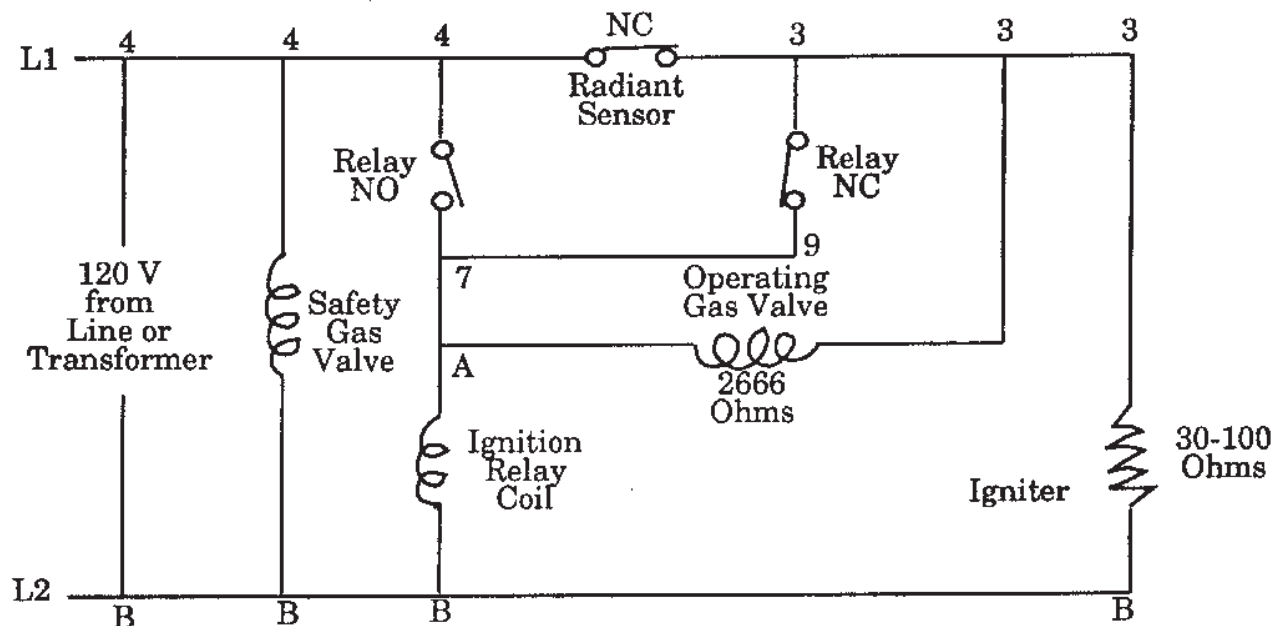

### NORTON IGNITION SYSTEM


Figure 1 (Start of Cycle)

#### Step #1

- The Safety Gas Valve is connected across the lines and opens immediately as soon as a need for heat is indicated by the thermostat.
- The Ignition Relay Coil is energized through the normally closed (NC) contacts of the Radiant Sensor and the NC contacts of the relay. NOTE: Figure 1 shows the electrical circuit of the relay just before it is energized. Figure 2 shows the circuit a *moment later*.
- The igniter is energized through the NC contacts of the Radiant Sensor.
- The Operating Gas Valve is connected such that the same 120 volts is applied to both sides of the Gas Valve and the valve stays closed.

## Operation of the Norton Ignition System

FIGURE 2

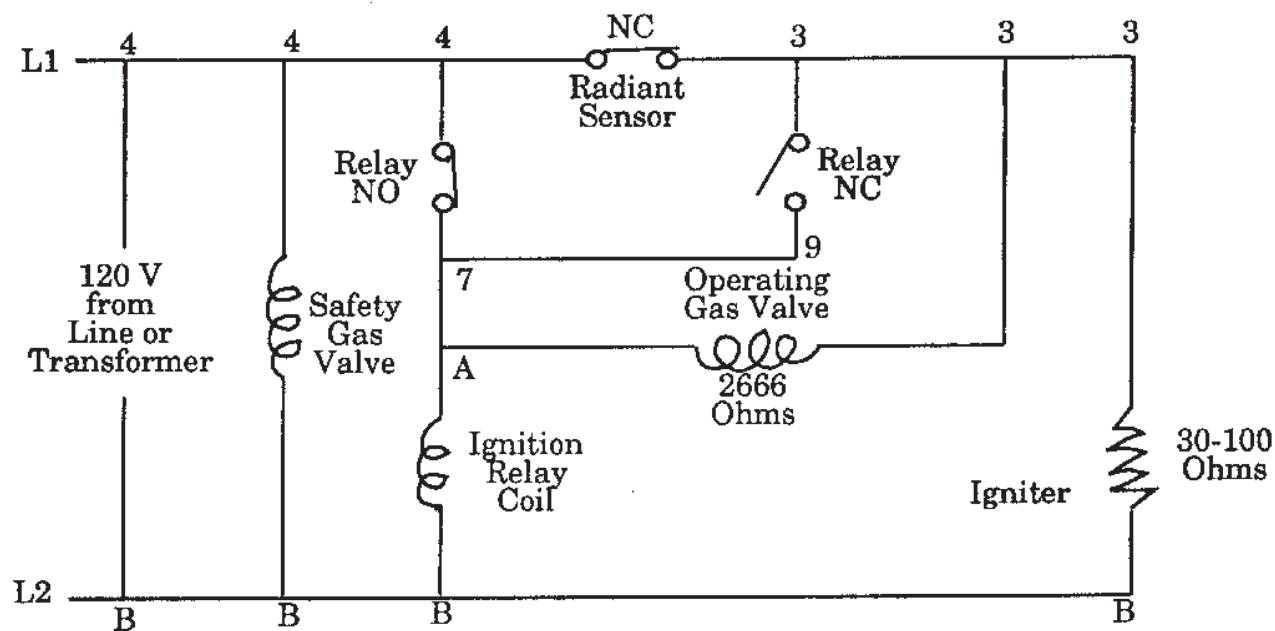


### NORTON IGNITION SYSTEM

Figure 2 (Start of Cycle)

#### Step #2

- The Ignition Relay closes now and the Relay Coil stays energized by being powered through the normally open (NO) contacts of the Ignition Relay which *close* before the NC contacts *open*.
- The operating gas valve still has the 120 volts applied to both sides of the gas valve and the valve stays *closed*.

FIGURE 3

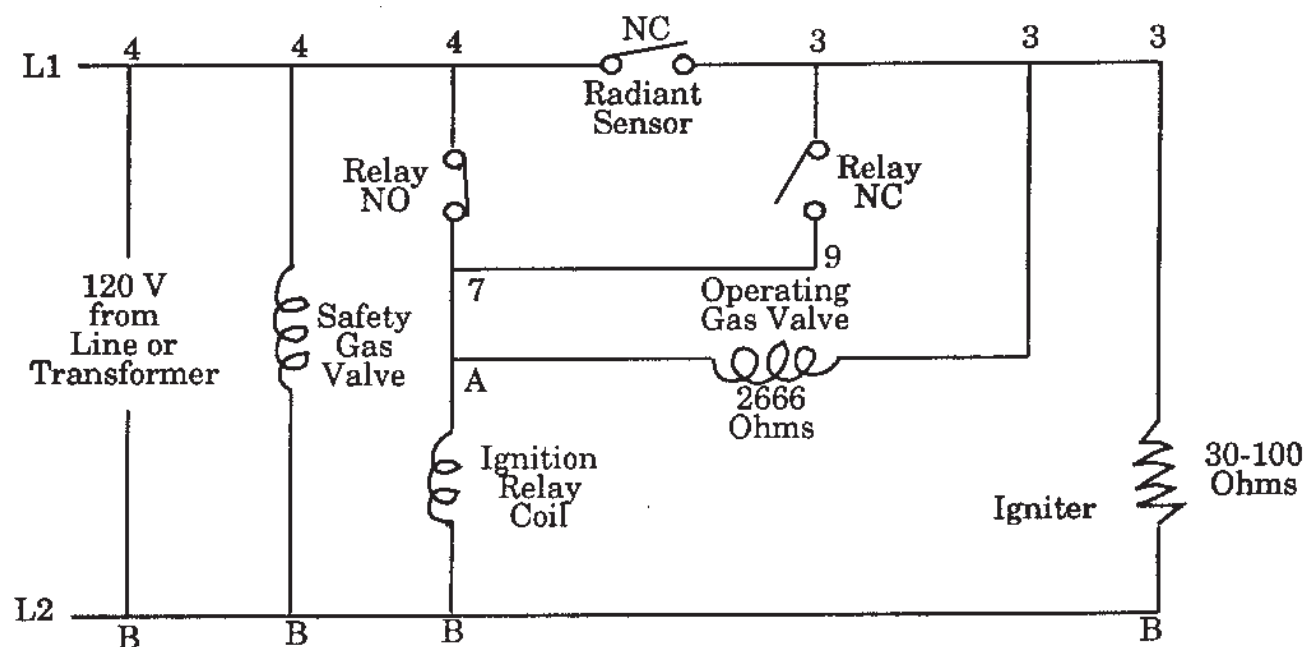

### NORTON IGNITION SYSTEM

Figure 3 (About 20 Seconds Later)

#### Step #3

- The Igniter glows *red hot*, which causes the Radiant Sensor to *open* its NC Contacts, which de-energizes the Igniter.
- As the Radiant Sensor NC Contacts *open*, the 120 volt to one side of the operating Gas Valve Coil is removed and an electrical circuit is formed through the NO Contacts of the Ignition Relay, through the Gas Valve and through the Igniter, and the Gas Valve *opens*. The relatively low resistance of the Igniter allows nearby **full** voltage to be applied to the operating Gas Valve and nearby **zero** voltage to the Igniter and the Igniter is de-energized for all practical purposes.
- As the raw gas flows against the *red hot* Igniter, ignition takes place. The radiant gas flame replaces the radiant glowing of the Igniter and the Radiant Sensor NC Contacts remain *open*.

## *Operation of the Norton Ignition System*

### **IGNITION OPERATION**

The flame will burn until the thermostat opens the circuit or until the time on the timer or coin meter expires.

The following summarizes the ignition operation:

- Start machine drying cycle.
- Carbide igniter will get *red hot*.
- Then, gas valve will open.
- The gas burners are ignited by the carbide igniter.
- Igniter will shut off and burners will remain on during drying cycle.
- Opening tumbler door will cause gas to extinguish. Shut door and gas will not light until flame sensor cools and normal ignition cycle begins.

### **NOTE**

#### **NOTE**

**Push “start” switch *after* door is shut.**

- If gas does not light, then the sensor will cool down and restart the ignition cycle.

### **SAFETY FEATURES**

### **SAFETY FEATURES**

#### **Power Interruptions During Burning of the Gas**


Both gas valves are de-energized and the gas is shut off. The Ignition Relay is also de-energized and returns the contacts to the NO and NC positions. Even with resumption of power, the operating gas valve stays closed until the NC contacts of the Radiant Sensor close (about 30 seconds from time of power interruption). A normal ignition cycle begins at this time.

#### **Burner Doesn’t Light Because of Low Voltage or Low Gas Pressure**

The operating gas valve will be energized for about 30 seconds and then the NC contacts of the Radiant Sensor will be closed. 120 volts is applied to both sides of the operating gas valve and it closes to shut off the gas. A normal ignition cycle begins at this time.

## Operation of the Norton Ignition System


120 Volts; 50/60 HZ; 1 Phase - TWL1512

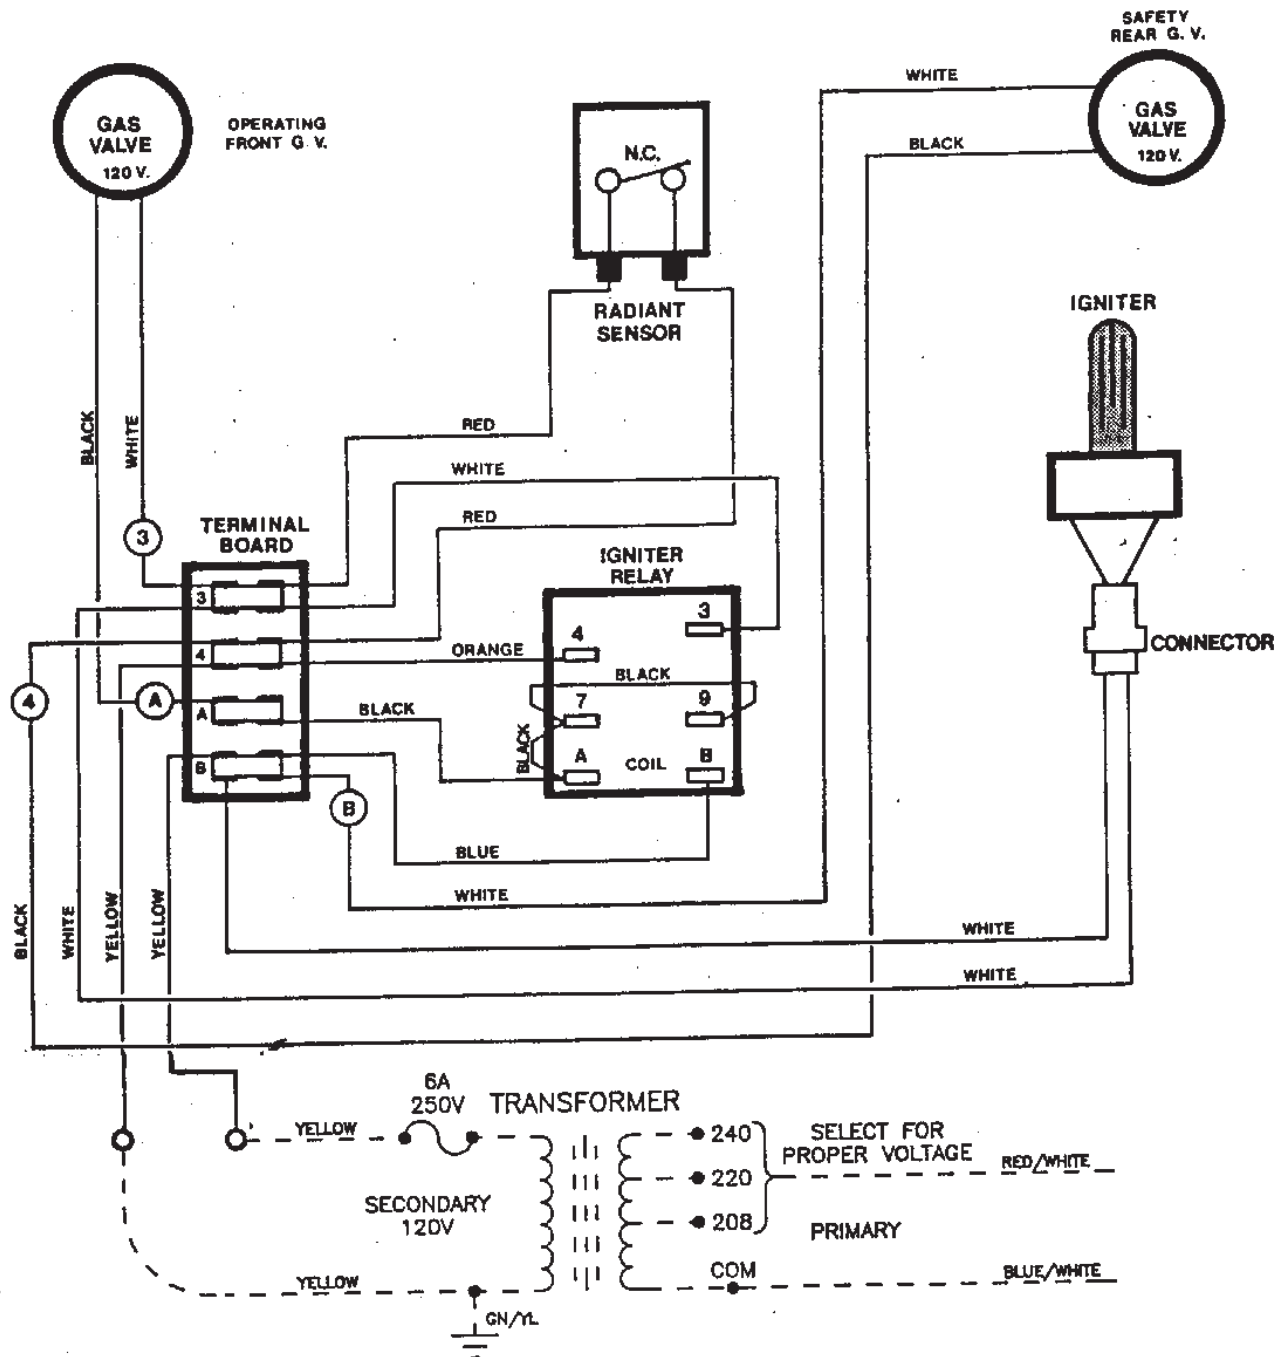



## Operation of the Norton Ignition System

120 Volts; 50/60 HZ; 1 Phase - Gas Dryers - TWL1587  
Automatic Computerized Drying Control

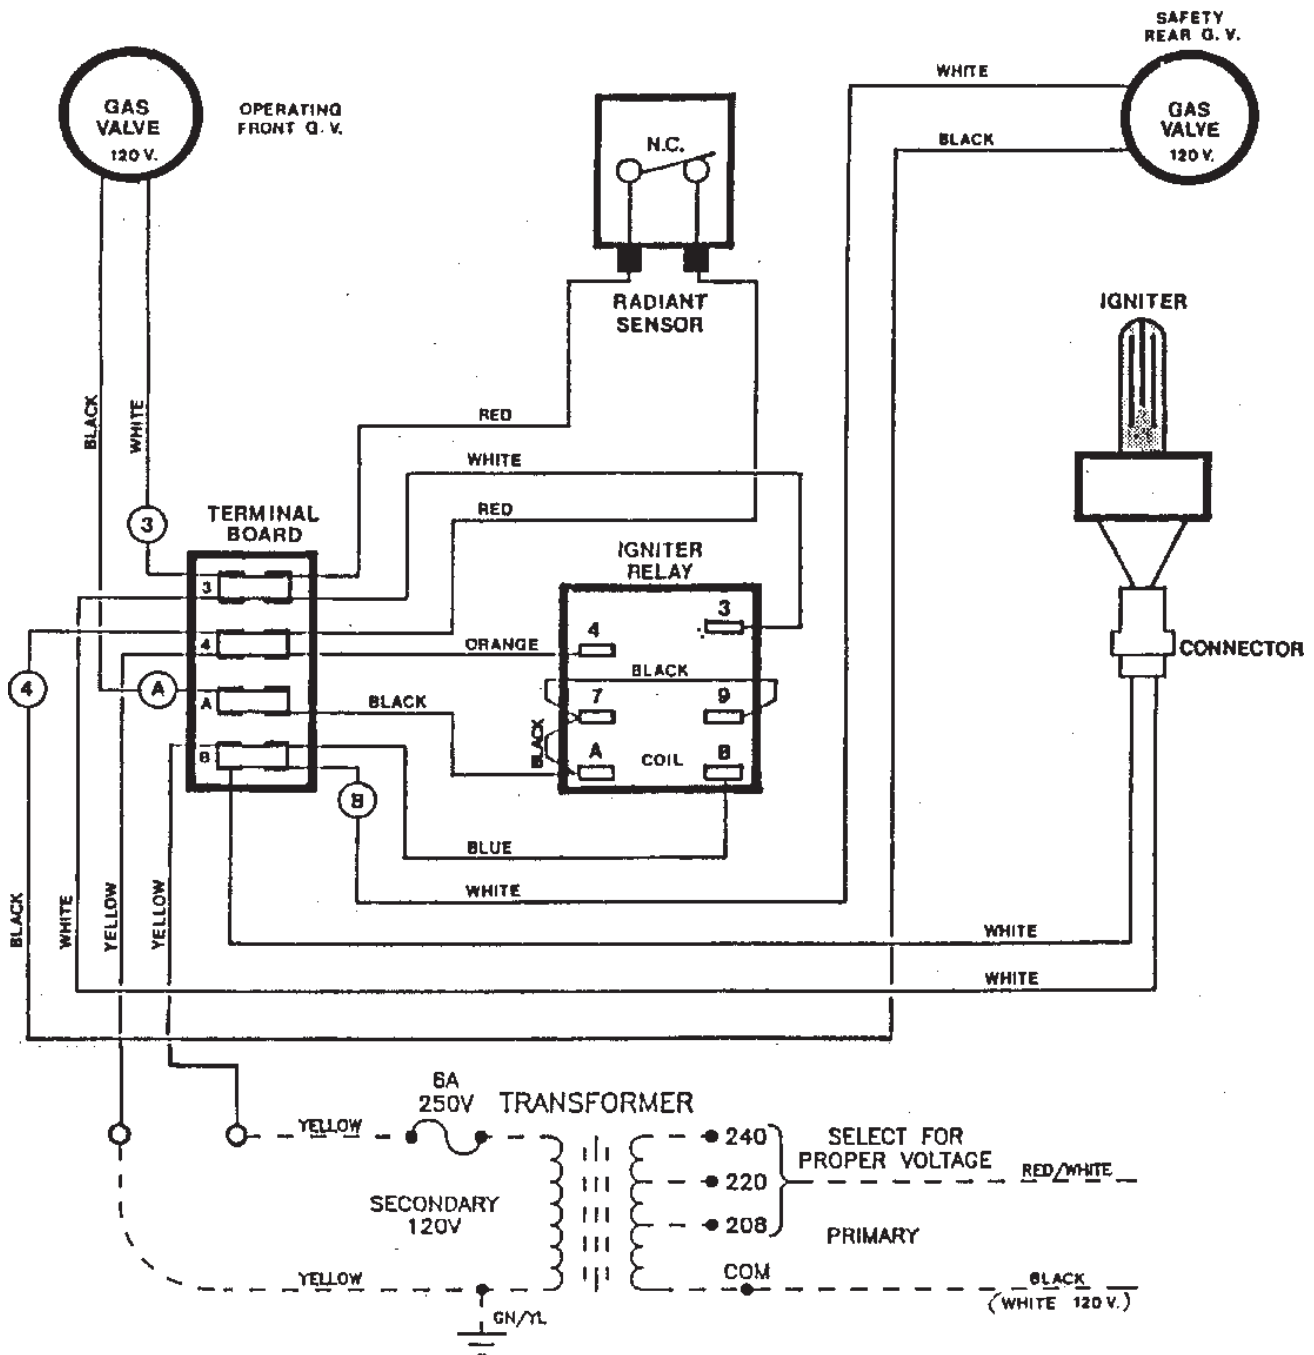

## *Operation of the Norton Ignition System*

### TEST PROCEDURE

### TEST PROCEDURE

1. If igniter does not glow *red*, disconnect and test with separate 120V. Replace if it does not glow *red*. If it is damaged or cracked, replace.
2. Check wiring of ignition system parts per wiring diagram.
3. Gas valves must be open (click) when dryer is energized. Burners will ignite after 12 to 25 seconds.
4. After flame is burning, Igniter will go out. If both gas valves do not open, then replace.
5. If Igniter does not go out, then replace Radiant Sensor. If the Radiant Sensor glass is broken, replace it.
6. Open and close dryer loading door after gas has started burning. When door is closed, gas should not flow until radiant sensor has cooled and Igniter recycles.

### INSTRUCTIONS FOR DIRECT IGNITION SYSTEM OPERATION

### INSTRUCTIONS FOR DIRECT IGNITION SYSTEM OPERATION

1. Open manual gas valve; handle should be parallel with gas line.
2. Start machine drying cycle. The igniter will glow *red hot*; the gas valves will open and the burners will ignite.
3. The igniter will shut off and the burners will continue burning during heat cycle.
4. Opening the tumbler loading door will cause the gas to extinguish. Shut the door and the gas will not flow until the flame sensor has cooled. Push the “**start**” button to begin cycle after door is closed. If ignition fails, wait for five minutes to restart.
5. To shut off dryer, close the manual gas valve. The handle should be at a right angle to the gas line. Turn off the main electrical supply switch.

### CAUTION

#### **CAUTION**

**Check igniters with 120V before installing on dryer.**

## *Troubleshooting*

### **TROUBLE ANALYSIS FOR ENERGY SAVER DRYERS AND THE NORTON IGNITION SYSTEM**

**Trouble analysis for Energy Saver Dryers and the Norton Ignition System.**

#### **CAUTION**

**Problems with the Norton Ignition System can also be the result of the following:**

#### **EXHAUST PIPE SIZE**

1. Exhaust air flow restriction. Exhaust pipe size **must be larger** than the **exhaust opening**. Refer to chart in manual.

#### **DRYER INLET AIR**

2. **Dryer inlet air** is a **MUST** for each unit. It must be 4 to 6 times the combined areas of the dryer exhaust outlet. Refer to chart in manual.

#### **DRYER PANELS**

3. All dryer **panels must be in place** and on machine for proper operation.

#### **GAS PRESSURE**

4. Gas pressure must be 7-9 1/2 inches WC for natural gas and 11 inches WC for propane or butane (bottled) gases.

5. Refer to chart for correct gas pipe sizes and lengths. The 3/4 inch gas pipe must be the minimum gas supply pipe for the dryer and over 50 ft., 1 inch pipe size.

#### **MAIN BURNER ORIFICE SIZE**

6. Main burner orifices **must be** correct size. They are calculated with the following information:

- a. Your locality heating value of gas, BTU/cu. ft.
- b. Local specific gravity of gas.
- c. Gas manifold pressure inches of WC.
  - 1) 3.5 inches WC pressure for natural gas.
  - 2) 11 inches WC pressure for propane or butane gases.
- d. Gas input rate per each burner orifice.

## *Troubleshooting*

---

### **TROUBLE ANALYSIS FOR ENERGY SAVER DRYERS AND THE NORTON IGNITION SYSTEM (continued)**

7. Voltage **must be** identical to what is on the Electrical Rating Plate. Prevent low voltage; it causes longer drying operation.
8. Back Draft Damper **must** swing **full open** to prevent air flow restrictions. (Check for full open operation every 6 months.) Non-operative or erratic operation of exhaust dampers will cause air flow switches to shut off gas and will result in longer drying time.

### **NOTE**

### **NOTE**

**The above should be checked and corrected before attempting to troubleshoot the Norton Ignition System.**